

# RS485 Communications Interface

Technical Manual  
HA463560U002 Issue 4

Compatible with Version 3.x Software

© Copyright 2007 Parker SSD Drives, a division of Parker Hannifin Ltd.

All rights strictly reserved. No part of this document may be stored in a retrieval system, or transmitted in any form or by any means to persons not employed by a Parker SSD Drives company without written permission from Parker SSD Drives, a division of Parker Hannifin Ltd. Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Parker SSD Drives cannot accept responsibility for damage, injury, or expenses resulting therefrom.

## WARRANTY

Parker SSD Drives warrants the goods against defects in design, materials and workmanship for the period of 12 months from the date of delivery on the terms detailed in Parker SSD Drives Standard Conditions of Sale IA058393C.

Parker SSD Drives reserves the right to change the content and product specification without notice.

# Safety Information



## **WARNING!**

During commissioning, remove the fuses (or trip the circuit breaker) on your 3-phase supply.  
Make sure the power is OFF, and that it cannot be switched on accidentally whilst you are working.

## **REFER TO YOUR MAIN PRODUCT MANUAL FOR SPECIFIC SAFETY INFORMATION ABOUT THE DEVICE YOU ARE CONTROLLING**

**IMPORTANT:** Please read this information BEFORE installing the equipment.

### **Intended Users**

This manual is to be made available to all persons who are required to install, configure or service equipment described herein, or any other associated operation.

The information given is intended to highlight safety issues, EMC considerations, and to enable the user to obtain maximum benefit from the equipment.

### **Application Area**

The equipment described is intended for industrial motor speed control.

### **Personnel**

Installation, operation and maintenance of the equipment should be carried out by qualified personnel. A qualified person is someone who is technically competent and familiar with all safety information and established safety practices; with the installation process, operation and maintenance of this equipment; and with all the hazards involved.

### **Safety**

All control and signal terminals are SELV, i.e. protected by double insulation.

### **EMC**

In a domestic environment this product may cause radio interference in which case the user may be required to take adequate counter-measures.

This equipment contains electrostatic discharge (ESD) sensitive parts. Observe static control precautions when handling, installing and servicing this product.

# Safety Information



## CAUTION!

At any time, there may be a loss of motor control and separate/independent application measures should be taken to ensure that such loss of motor control cannot present a safety hazard.

### RISK ASSESSMENT

Under fault conditions, power loss or unintended operating conditions, the drive may not operate as intended. In particular:

- Stored energy might not discharge to safe levels as quickly as suggested, and can still be present even though the drive appears to be switched off
- The motor's direction of rotation might not be controlled
- The motor speed might not be controlled
- The motor might be energised

A drive is a component within a drive system that may influence its operation or effects under a fault condition. Consideration must be given to:

- Stored energy
- Supply disconnects
- Sequencing logic
- Unintended operation

# Contents

Contents

Page

## **RS485 TECHNOLOGY OPTION**

**1**

|  |           |
|--|-----------|
| <b>A System Overview .....</b>                       | <b>1</b>  |
| Protocols.....                                       | 1         |
| • El Bisynch ASCII/Binary .....                      | 1         |
| • MODBUS RTU .....                                   | 2         |
| Product Features .....                               | 2         |
| Product Code.....                                    | 2         |
| <b>Installation.....</b>                             | <b>3</b>  |
| • PLC/SCADA Supervisor (4-wire only).....            | 3         |
| • Cable Specification .....                          | 3         |
| • Cable Routing .....                                | 3         |
| • Earthing/Grounding .....                           | 4         |
| • User Connections to the Main Serial Port (P1)..... | 4         |
| • DIL Switch (SW1) Settings .....                    | 4         |
| • Terminators.....                                   | 4         |
| • Terminal Block (TB1) Connections.....              | 5         |
| Fitting and Connecting to the Technology Box.....    | 5         |
| Wiring Diagrams.....                                 | 6         |
| Initial Check for Connection .....                   | 8         |
| Understanding the LED Indications.....               | 8         |
| <b>Initial Set-up for El Bisynch ASCII.....</b>      | <b>10</b> |
| Configuring the Drive.....                           | 10        |
| • The El BISYNCH ASCII MMI View.....                 | 10        |
| • The Non-specific ConfigEd-Lite & MMI View.....     | 11        |
| Configuring the PLC/SCADA Supervisor .....           | 12        |
| ASCII Communications.....                            | 13        |
| • What Information Can I Transfer? .....             | 13        |
| • How is the Information Transferred? .....          | 13        |
| • Programmer's Information .....                     | 15        |
| • El Bisynch ASCII Message Protocol.....             | 16        |
| • El Bisynch ASCII Parameter Mapping .....           | 17        |
| • El Bisynch ASCII Sequence Diagrams .....           | 20        |
| • Transferring Data - ASCII Example Messages .....   | 21        |
| Character Definitions .....                          | 26        |
| Control Character Definitions .....                  | 26        |
| Last Error Code (EE) .....                           | 27        |
| <b>Initial Set-up for El Bisynch Binary.....</b>     | <b>28</b> |
| Configuring the Drive.....                           | 28        |
| • The El BISYNCH Binary MMI View.....                | 28        |
| • The Non-specific ConfigEd-Lite & MMI View.....     | 29        |
| Configuring the PLC/SCADA Supervisor .....           | 30        |

# Contents

---

| <i>Contents</i>                                       | <i>Page</i> |
|---|-------------|
| Binary Communications .....                           | 31          |
| • How is the Information Transferred? .....           | 31          |
| • El Bisynch Binary Message Protocol.....             | 32          |
| • Transferring Data - Binary Example Messages.....    | 32          |
| Control Character Definitions .....                   | 33          |
| Data Character Definitions .....                      | 34          |
| List of PNO Assignments.....                          | 34          |
| El Bisynch Binary Parameter Specification Tables..... | 35          |
| <b>Initial Set-up for MODBUS RTU .....</b>            | <b>46</b>   |
| Configuring the Drive.....                            | 46          |
| • The Modbus RTU MMI View.....                        | 46          |
| • The Non-specific ConfigEd-Lite & MMI View.....      | 47          |
| Configuring the PLC/SCADA Supervisor .....            | 48          |
| MODBUS RTU Communications .....                       | 49          |
| • How is the Information Transferred? .....           | 49          |
| • RTU Mode of Transmission.....                       | 50          |
| • Cyclic Redundancy Check .....                       | 50          |
| • Function Codes .....                                | 54          |
| • Typical Transmission Line Activity.....             | 62          |
| • MODBUS RTU Parameter Mapping .....                  | 63          |
| <b>Troubleshooting.....</b>                           | <b>65</b>   |
| ASCII Table.....                                      | 67          |



# RS485 TECHNOLOGY OPTION

## A System Overview

The RS485 Technology Option provides a serial data port, allowing VSDs (variable speed drives) to be linked to form a network. Using a PLC/SCADA or other intelligent device, this network can be continuously controlled to provide supervision and monitoring for each VSD in the system.

With each unit under local control, the central supervisor performs only periodic setpoint updating, control sequencing and data collection.

In the system, the PLC/SCADA supervisor acts as the Master, and the VSD as the Slave.

The network of VSDs can be set-up using just one unit's MMI/Operator Station, or connection to ConfigEd Lite (or other suitable PC programming tool).

### Advantages with this type of control system

1. Multi-wire analog transmission from a central programmable controller is replaced by a bussed digital system using serial data transmission over differential twisted-pair wires.
2. Digital transmission is fundamentally less noise-prone than analog methods, and the accuracy of the transmitted data is unaffected by the transmission medium. The use of intelligent devices at either end of the data link allows error checking to be used. This virtually eliminates the effects of electrical noise on data integrity. It is therefore possible to issue setpoints to drives with much higher accuracy using this method.
3. The communication standard used allows up to 32 drives to be connected to a single link which can be driven from a computer serial port. Additional drives can be readily accommodated through additional ports. Most computers are equipped with RS232 serial ports which can be easily converted to accommodate the RS485 standard. Modules are available from Parker SSD Drives to make this conversion.
4. The chosen standard and protocol are compatible with other Parker SSD Drives products. Temperature controls, process controls, data loggers and drives can communicate easily with a common supervisory system.

## Protocols

### EI Bisynch ASCII/Binary

These communications protocols come under the heading of Binary Synchronous Communications Data Link Control (BSCDLC).

This is all part of an internationally recognised ANSI standard protocol called BISYNCH (Binary Synchronous) and is known by the abbreviation x3.28.

They are widely used by manufacturers of computers, computer peripherals, and communications equipment.

EI BISYNCH, the specific form of communication used, corresponds with the following full American National Standard definition:

- ANSI Standard: x3.28, Revision: 1976
- Establishment and Termination Control Procedures Sub-category 2.5:  
*Two-way Alternate, Non-switched Multi-point with Centralised Operation & Fast Select*
- Message Transfer Control Procedure Sub-category B1:  
*Message Associated Blocking with Longitudinal Checking & Single Acknowledgement*

This is known by the abbreviation ANSI - x3.28 - 2.5 - B1.

## MODBUS RTU

The MODBUS RTU (Remote Terminal Unit) protocol is an efficient binary protocol. It has been the industry's *de facto* standard since 1979.

Refer to <http://www.modbus.org> for more information.

### Product Features

- Suitable for use with:
 

|                   |                              |
|-------------------|------------------------------|
| 590+              | software version 5.x onwards |
| 590+DRV           | software version 5.x onwards |
| 605A & B          | software version 4.x onwards |
| 605C              | software version 4.x onwards |
| 690+B             | software version 1.x onwards |
| 690+C,D,E,F,G,H,J | software version 1.x onwards |
- Hardware self-test
- Connection using shielded, twisted-pair cable
- Configured using Function Block inputs
- Diagnostics using Function Block outputs
- Either 2-wire or 4-wire operation
- Software-selectable Baud Rate
- Software-selectable Slave Address
- Direct tag access for all parameters

### Product Code

The Parker SSD Drives' product is fully identified using an alphanumeric code which records how the product was assembled, and its various settings when despatched from the factory.

The Technology Option can be supplied with the drive product, or supplied separately:

| Product  | Product Code when supplied with the Drive                  | Product Code when supplied separately |
|----------|--|---------------------------------------|
| 590+     | <b>590P</b> /xxxx/xxx/xxxx/xx/xxx/ <b>EI00</b> /xxx/xxx    | 6055/EI00/00 - plug-in Technology Box |
| 590+DRV  | <b>955+</b> /x/x/xxxx/xxx                                  | 6055/EI00/00 - plug-in Technology Box |
| 605A & B | <b>605</b> /xxx/xxx/x/x/xxx <b>2</b> /xx/xxx               | 6053/EI00/00 - plug-in Technology Box |
| 605C     | <b>605C</b> /xxxx/xxx/xxxx/xx/xxx/ <b>EI00</b> /xx/xxx/xxx | 6055/EI00/00 - plug-in Technology Box |
| 690+B    | <b>690PB</b> /xxxx/xxx/x/x/xxxx/xx/x/ <b>EI00</b> /x/x/x   | 6053/EI00/00 - plug-in Technology Box |
| 690+C-J  | <b>690Px</b> /xxxx/xxx/x/x/xxxx/xx/x/ <b>EI00</b> /x/x/x   | 6055/EI00/00 - plug-in Technology Box |



# Installation

**WARNING!**

Before installing, ensure that the drive and all wiring is electrically isolated and cannot be made "live" unintentionally by other personnel.

Wait 5 minutes after disconnecting power before working on any part of the system or removing the covers from the Drive.

The RS485 Technology Option is provided as a plug-in Technology Box.

It can be operated as a 2-wire or 4-wire system.

- A 2-wire system can only be used in a network in which all devices use their tri-state capability. Data flow is restricted, i.e. transmit and receive cannot be simultaneous (half duplex).
- A 4-wire system is suitable for use on a network in which the Master does not have or use its tri-state capability. It permits simultaneous transmit and receive (full duplex).

The driver in an RS485 system has tri-state capability (i.e. its output can be disabled) which allows multiple transmitters to be connected to the same bus. RS485 thus supports "multi-drop" operation. In multi-drop systems there is always one device which is a "Master" and which sends messages to or requests data from the "Slaves". A Slave never initiates a communication.


**Note:** *It is possible to make serial communications operate without adhering to the following recommendations, however, the recommendations will promote greater reliability.*

## PLC/SCADA Supervisor (4-wire only)

If possible, avoid using a PLC/SCADA supervisor which take its transmitter to a high impedance state (tri-state) when idling. If it is unavoidable, then it is essential to use properly screened cable.

### Cable Specification

Use cable which has two twisted pairs, with each pair individually screened as shown. The characteristic impedance should be in the range 100 to 165 Ohms.

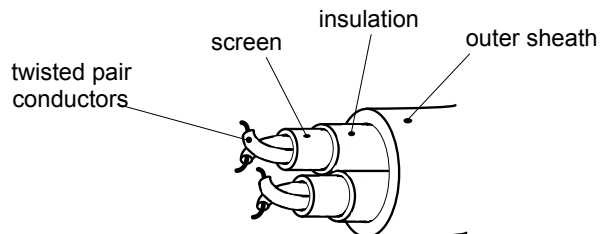

| Recommended Cable Specification |                               |
|---------------------------------|-------------------------------|
| Characteristic Impedance        | 100-165Ω at 3-20MHz           |
| Cable Capacitance               | <30pF/m                       |
| Core Diameter                   | 0.34mm <sup>2</sup> (22 AWG)  |
| Cable Type                      | Twisted pair cable            |
| Resistance                      | <110Ω/km                      |
| Shielding                       | Copper braid, or braid & foil |

**Note:** *Belden B3079A cable meets the above specification, but there are others.*

### Cable Routing

Daisy chain one drive to the next. The supervisor should be at one end of the run. Avoid spurs.

## Earthing/Grounding

Connect the screens of both pairs of wires to ground at the supervisor. If possible, connect the supervisor's transmitter/receiver 0V reference to earth. Connect all screens as shown in the following diagrams.

## User Connections to the Main Serial Port (P1)

The serial port on the Option allows the following RS485 links to be made.

|  | RS485                      |                     |
|--|----------------------------|---------------------|
| Electrical Connections   | 4-wire differential        | 2-wire differential |
| Number of transmitters and transceivers allowed per differential pair of wires | 32 drivers<br>32 receivers | 32 transceivers     |
| Maximum cable length   | 4000ft/1200 metres         |                     |


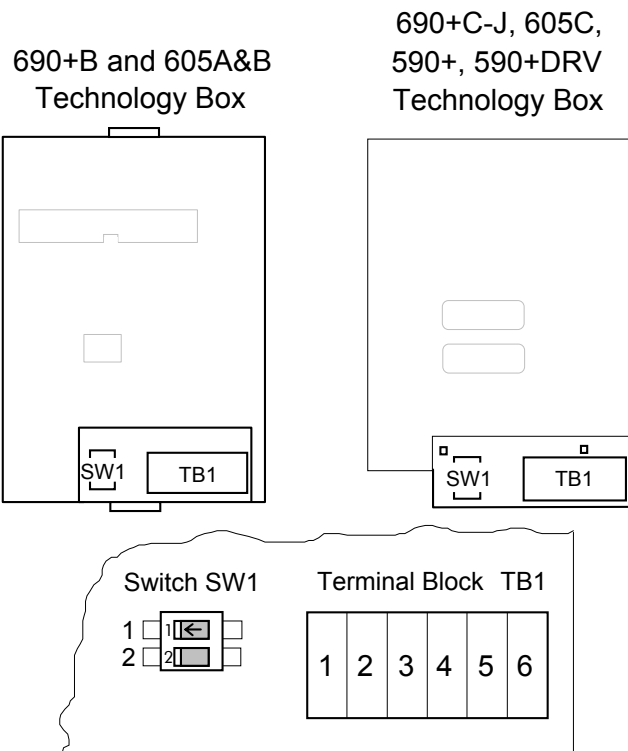


Figure 1 Option showing Terminal Block TB1 and DIL Switch SW1

## DIL Switch (SW1) Settings

Set this switch to select 2-wire or 4-wire operation, and to switch in a terminator for the last drive in the system.

| Switch | Status | Description              |
|--------|--------|--------------------------|
| 1      | OFF    | 4-wire (default)         |
|        | ON     | 2-wire                   |
| 2      | OFF    | Terminator out (default) |
|        | ON     | Terminator in            |

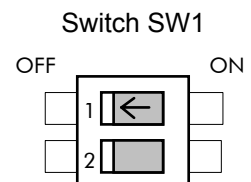

## Terminators


- The unit logically furthest from the supervisor must have switch 2 set to ON.
- All other units in the system must have switch 2 set to OFF.

The supervisor's receiver input should also have a terminating resistor, chosen to match the characteristic impedance of the cable, typically 100 to 165 Ohms.

## Terminal Block (TB1) Connections

| Terminal No. | 2-Wire Designation                       | 4-Wire Designation                       |
|--------------|--|--|
| 1            | not used                                 | TXB                                      |
| 2            | not used                                 | TXA                                      |
| 3            | 0V                                       | 0V                                       |
| 4            | Cable Screen<br>(except 690+B, 605A & B) | Cable Screen<br>(except 690+B, 605A & B) |
| 5            | RXB/TXB                                  | RXB                                      |
| 6            | RXA/TXA                                  | RXA                                      |

## Fitting and Connecting to the Technology Box

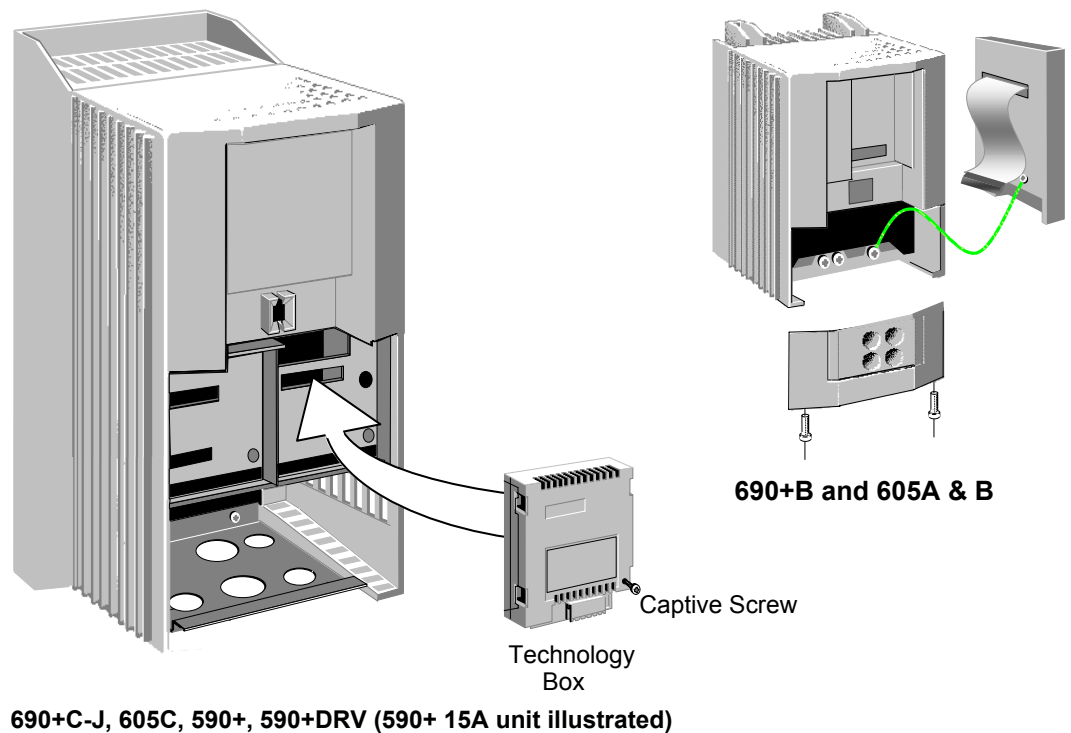

690+C-J, 605C, 590+, 590+DRV (590+ 15A unit illustrated)

Figure 2 Plug-in Technology Boxes

### WARNING!

Ensure that all wiring is isolated.

**IMPORTANT:** Remember to set the switch positions on the DIL switch, SW1.

The Technology Option plugs into the right-hand position on the front of the drive, or in place of the Operator Station/blank cover (605A & B only).

It can be used with the Operator Station fitted, but for the 605A & B unit you must mount the Operator Station remotely using the Panel Mounting Kit with connecting lead (6052). The connecting lead enters the 605 A & B drive through the gland plate.

- Remove the terminal cover and screws.
- On the 605A & B unit, plug the ribbon cable into the back of the Technology Box and into the socket on the drive.
- Click the Technology Box into place in the recess on the front of the drive. If provided, secure in position by tightening the captive screw on the bottom right hand corner of the Option.
- Connect terminal 4 to an earth screw on the drive for 690+B, 605A and 605B drives.
- Make all user wiring connections. Refer to the Wiring Diagrams.
- Re-fit the terminal cover securely with the screws.

## Wiring Diagrams

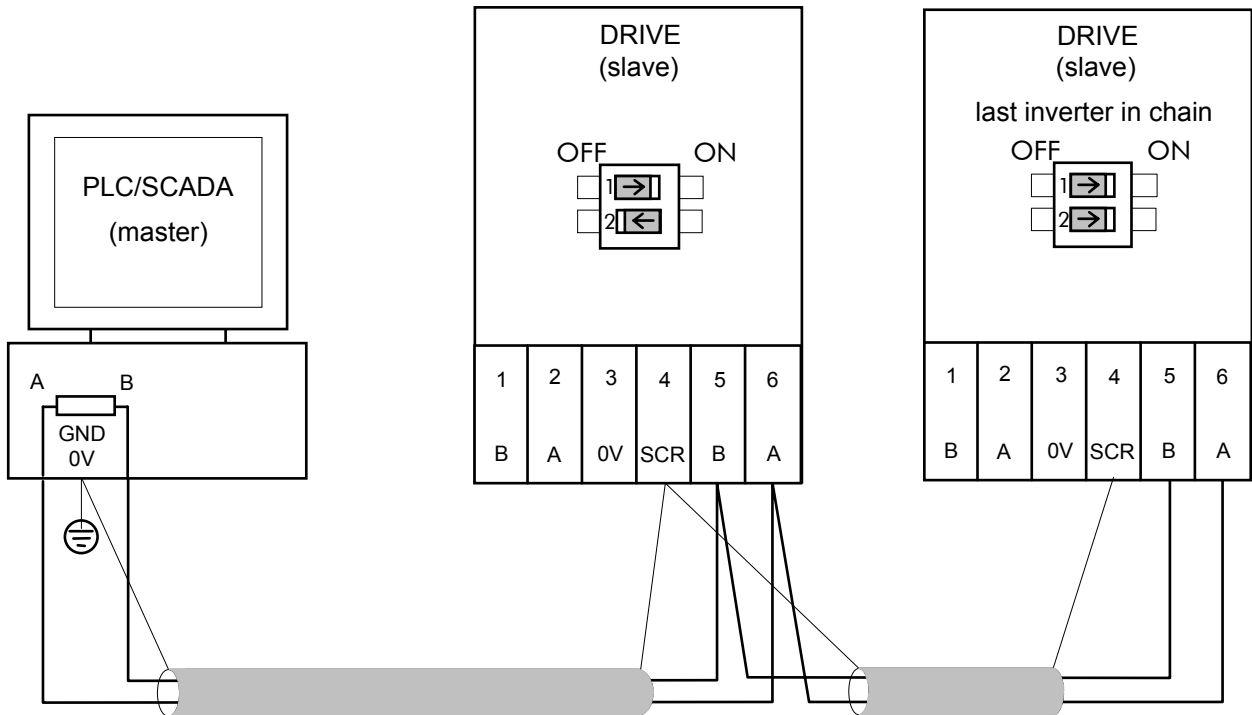


Figure 3 2-Wire Wiring Diagram for the 690+C-J, 605C, 590+, 590+DRV Drive

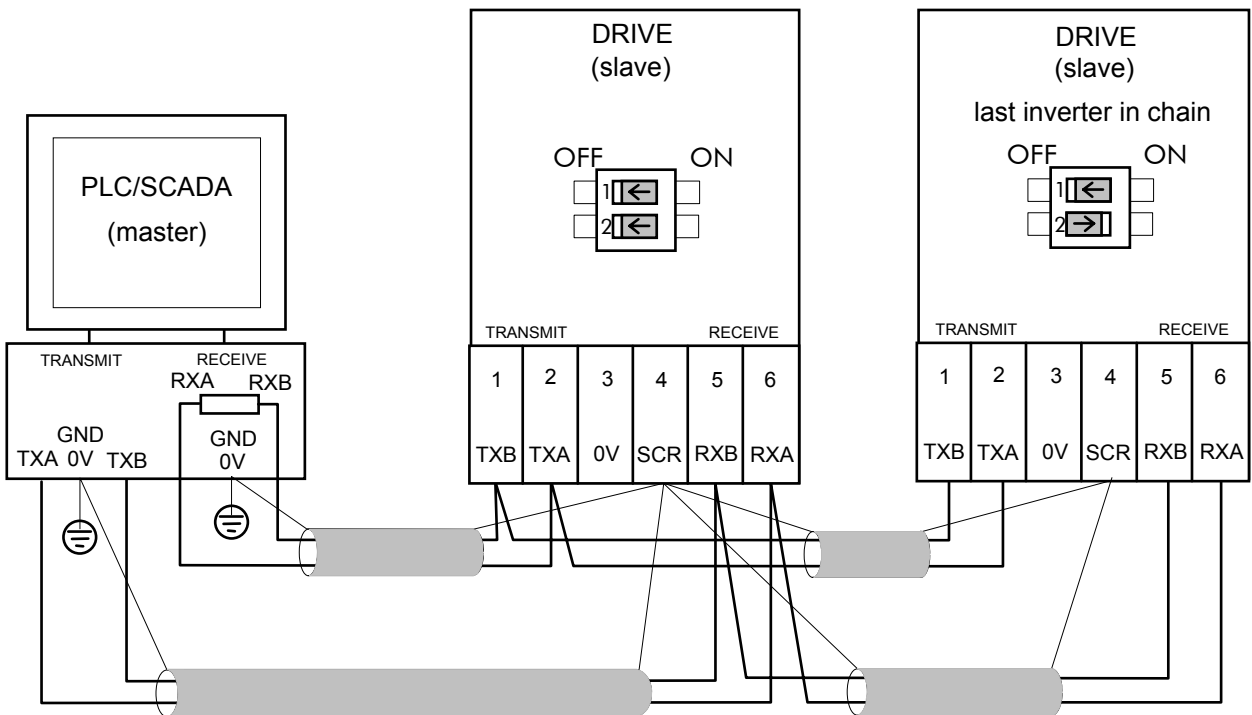


Figure 4 4-Wire Wiring Diagram for the 690+C-J, 605C, 590+, 590+DRV Drive

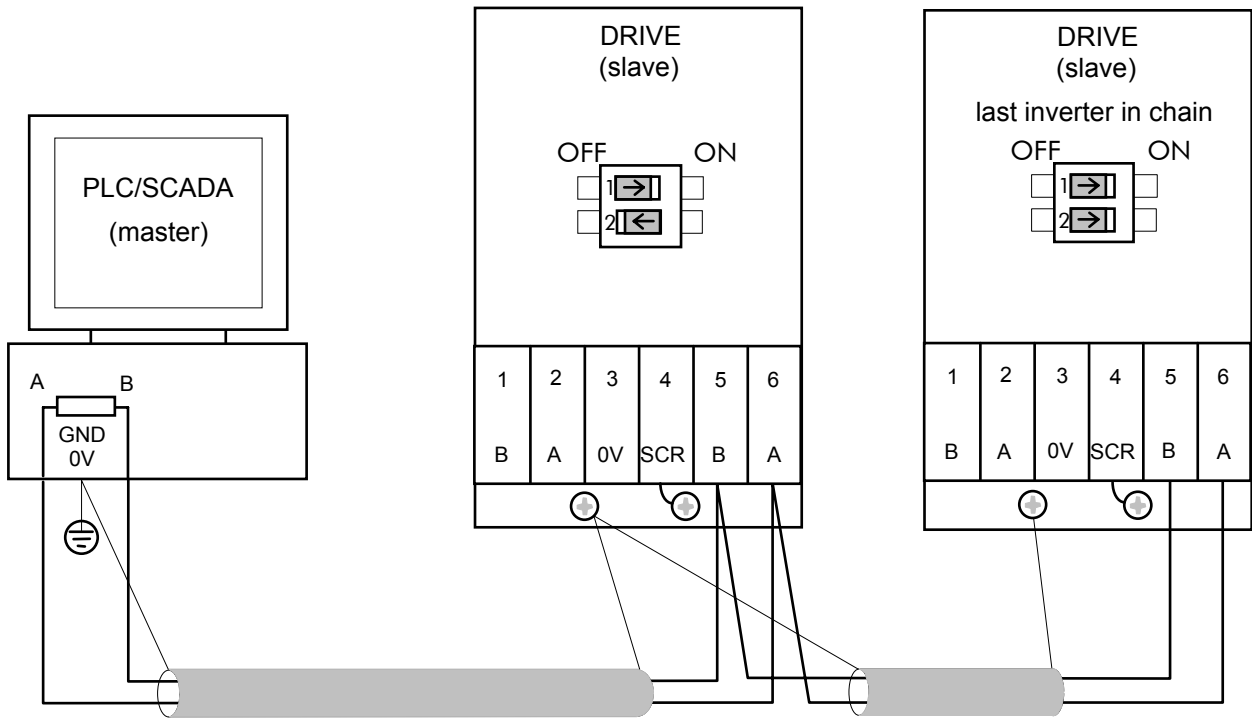


Figure 5 2-Wire Wiring Diagram for the 690+B and 605A & B Drive

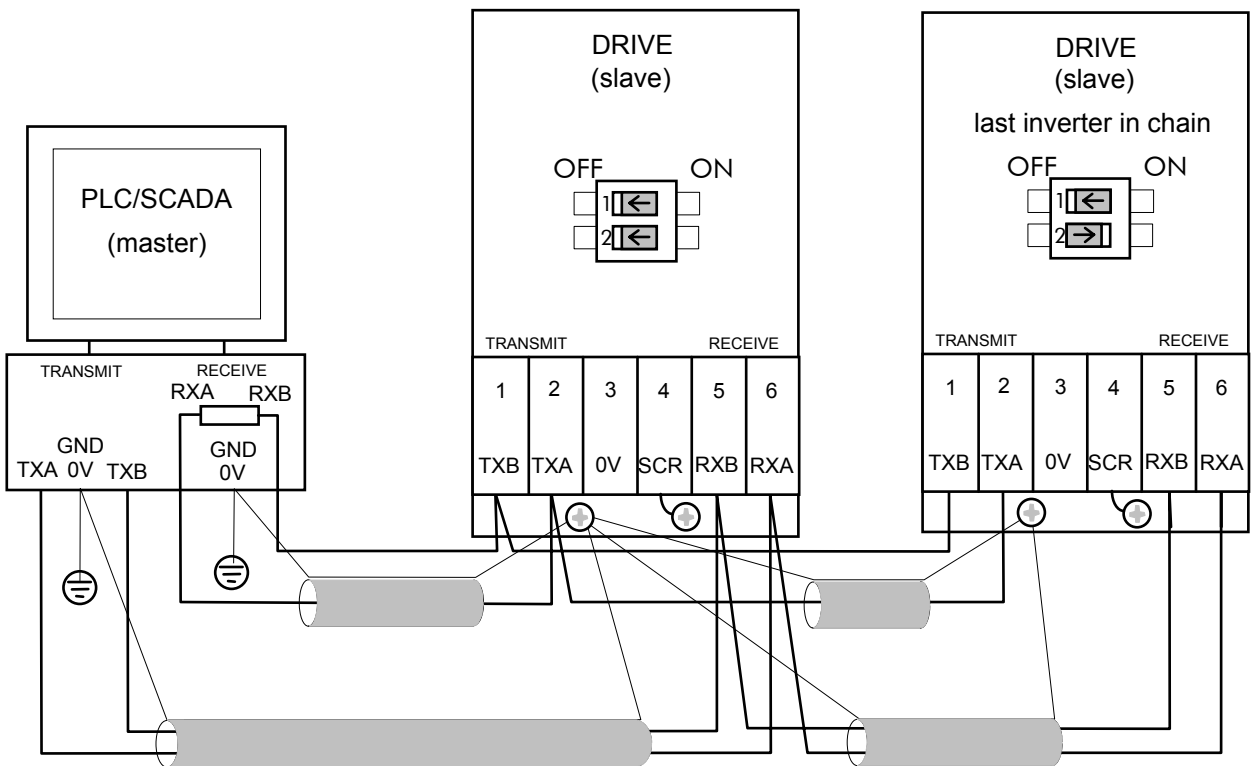


Figure 6 4-Wire Wiring Diagram for the 690+B and 605A & B Drive

## Initial Check for Connection

With the correct connections to the active PLC/SCADA supervisor, the MODULE LED will be ON continuously and the NETWORK LED will indicate the Idle state with a short flash.

|             |  |             |
|-------------|--|-------------|
| ON          |  | MODULE LED  |
| SHORT FLASH |  | NETWORK LED |

## Understanding the LED Indications

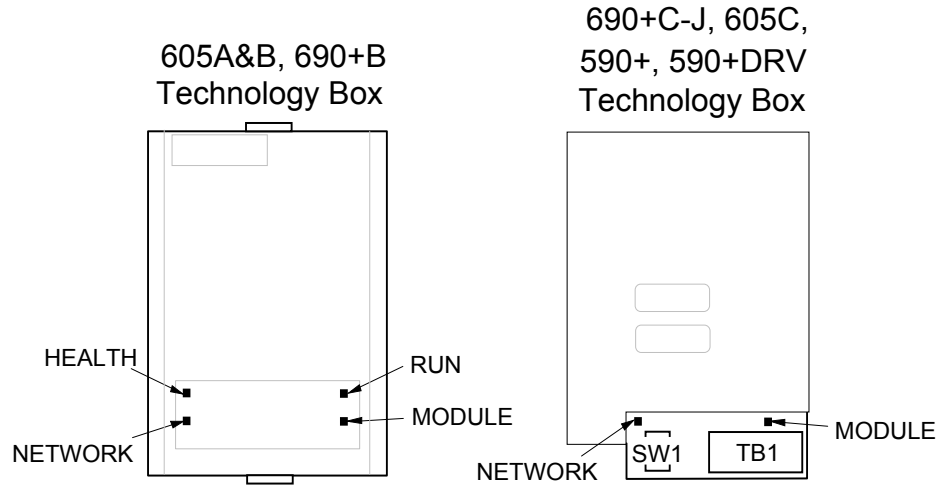


Figure 7 Technology Option LEDs

### HINT:

The general rule for LED indications is  
 “ON IS GOOD, OFF IS BAD”

### Health and Run LEDs

#### 690+B and 605A & B Technology Box

These LEDs reproduce the indications of the LEDs on the 605 that are hidden by the fitting of the Technology Box.

#### 690+C-J, 605C, 590+, 590+DRV Technology Box

The board does not have its own Health or Run LEDs. The LEDs are either on the Operator Station or blank cover.






### Module LED

This indicates the set-up state of the Technology Box. The states indicated are those produced by the FAULT parameter of the TEC OPTION function block.

| Module LED Indication | FAULT Parameter Indication | Description                                     |
|-----------------------|----------------------------|---|
| OFF                   | SELF TEST                  | Initialising                                    |
| SHORT FLASH           | HARDWARE                   | Hardware fault                                  |
| FLASH                 | TYPE MISMATCH              | Wrong type or disabled                          |
| LONG FLASH            | PARAMETER                  | Set-up fault, parameter values out-of-range     |
| ON                    | NONE                       | Valid set-up, ready for external communications |

## Network LED

This indicates the state of the connected network.

| Network LED Indication  | Description   |
|---|---|
| OFF          | Not ready for external communications or Idle with inverted RX line |
| SHORT FLASH  | Idle with correct RX line.  |
| FLASH        | Activity on RX line (within last second)                            |
| LONG FLASH   | Valid character received (within last second)                       |
| ON           | Addressed (within last 5 seconds)                                   |

**Note:** The NETWORK LED can only be in the ON state when the MODULE LED is ON continuously, indicating that the Option is ready for external communications.

# Initial Set-up for EI Bisynch ASCII


## Configuring the Drive

Begin by configuring the drive to accept the Technology Option. Use the keypad (MMI), or ConfigEd Lite to configure the TEC OPTION function block parameters inside the drive before commissioning the RS485 technology option.

The parameter names and functions in this function block are inter-dependent and will change with different parameter values and various Options that can be fitted.

Fit the RS485 option to the drive:

- For the 605 and 690+ drives, navigate to the VIEW LEVEL parameter and select ADVANCED. This allows you to view the TEC OPTION menu.

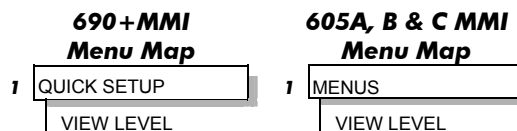

- Navigate to the TEC OPTION menu and:
  - Select RS485 in the TYPE parameter
  - Select EI ASCII in the PROTOCOL parameter
  - Select the Baud Rate
  - Enter a GID address (if required)
  - Enter a UID address (if required)
  - Check the FAULT parameter for error messages and rectify if necessary



**Note:** When using the MMI, remember to save the set-up via the Parameter Save or Config Save menu.

When setting values for parameters from ConfigEd Lite (or other suitable PC programming tool) you are able to select any value in the parameter's range, i.e. -32768 to 32767. If the value is incorrect, i.e. it doesn't correspond to a value that can be set using the MMI, then the FAULT output parameter will be set to PARAMETER.

**Note:** ConfigEd Lite is Parker SSD Drives' Windows-based block programming software.

## The EI BISYNCH ASCII MMI View

With the RS485 option correctly installed, the TEC OPTION function block will contain the following parameter names when viewed using the MMI.

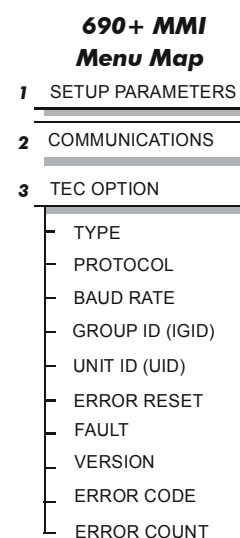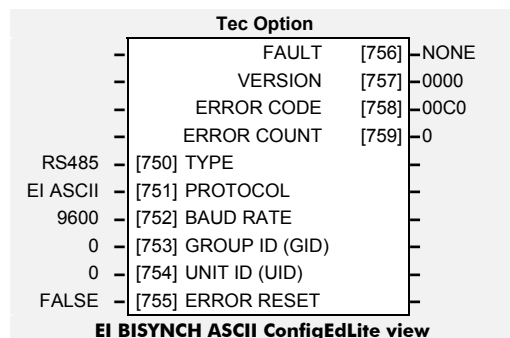



*SERIAL LINKS is at Menu Level 1 for the 590+ and 590+DRV and contains the TEC OPTION menu.*



## The Non-specific ConfigEd-Lite & MMI View

This is how the TEC OPTION function block looks when viewed using ConfigEd-Lite.

The MMI also displays these non-specific parameter names when the RS485 option is not yet installed into the drive, or an incorrect TYPE is selected for the fitted Option.

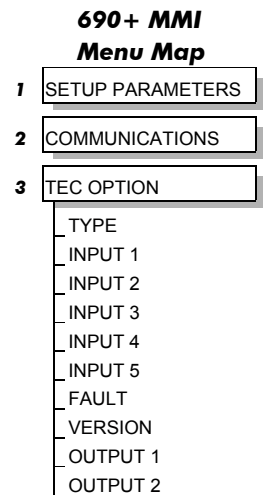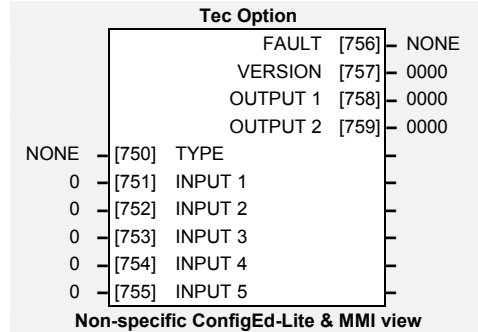

## MMI Parameter Descriptions for EI Bisynch ASCII

### TYPE

Range: Enumerated - see below

Selects the type of Technology Option. The TYPE parameter is automatically set when defaults are loaded if a Technology Option is present.

Enumerated Value : Technology Option

- 0 : NONE
- 1 : **RS485**
- 2 : PROFIBUS DP
- 3 : LINK
- 4 : DEVICENET
- 5 : CANOPEN
- 6 : LONWORKS
- 7 : CONTROLNET
- 8 : MODBUS PLUS
- 9 : ETHERNET

### PROTOCOL

Range: Enumerated - see below

Selects the protocol to be used.

Enumerated Value : Protocol

- 0 : EI ASCII (default)
- 1 : EI BINARY
- 2 : MODBUS RTU

### BAUD RATE

Range: Enumerated - see below

Selects the Baud Rate.

Enumerated Value : Baud Rate

- 0 : 300
- 1 : 600
- 2 : 1200
- 3 : 2400
- 4 : 4800
- 5 : 9600 (default)
- 6 : 19200
- 7 : 38400
- 8 : 57600
- 9 : 115200

- GROUP ID (GID)** *Range: 0 to 7*  
 The Parker SSD Drives protocol group identity address.
- UNIT ID (UID)** *Range: 0 to 15*  
 The SSD DRIVES protocol unit identity address.
- ERROR RESET** *Range: FALSE/TRUE*  
 When TRUE, clears the ERROR CODE parameter (setting it to 00C0) and sets the ERROR COUNT parameter to zero.
- FAULT** *Range: Enumerated - see below*  
 The fault state of the Technology Option.
- |                   |                                 |
|-------------------|---------------------------------|
| 0 : NONE          | no faults                       |
| 1 : PARAMETER     | parameter out-of-range          |
| 2 : TYPE MISMATCH | TYPE parameter not set to RS485 |
| 3 : SELF TEST     | hardware fault - internal       |
| 4 : HARDWARE      | hardware fault - external       |
| 5 : MISSING       | no option fitted                |
- Also refer to “Module LED”, page 8.
- VERSION** *Range: 0x0000 to 0xFFFF*  
 The version of the Technology Option card. If no option is fitted then the version is reset to zero.
- ERROR CODE** *Range: 0x0000 to 0xFFFF*  
 Displays the last error as a hexadecimal code. Refer to “Last Error Code (EE)”, page 27 for a list of codes.
- ERROR COUNT** *Range: 0 to 9999*  
 Increments each time an error is detected.  
 Note: will stop counting at 9999 (see ERROR RESET).

## Configuring the PLC/SCADA Supervisor

By referring to the Parameter Specification Table in the main Product Manual, you can enter the parameter information you require.

It provides the information in the following way:

### Type

The first page of the Parameter Specification Table chapter details parameter types.

### ID/MN

The ID or MN column provides the parameter mnemonic (of the tag number).

↓

| Tag | Name            | MMI Menu                                | CE Block       | Range                        | ID | Notes |
|-----|-----------------|---|----------------|------------------------------|----|-------|
| 1   | NONVOL VERSION  | <i>Not on MMI</i>                       |                | 0x0000 to 0xFFFF             | a1 |       |
| 2   | RAMP ACCEL TIME | SETUP PARAMETERS::RAMPS                 | Ramps          | 0.1 to 600.0 SECS            | a2 |       |
| 3   | RAMP DECEL TIME | SETUP PARAMETERS::RAMPS                 | Ramps          | 0.1 to 600.0 SECS            | a3 |       |
| 4   | CONSTANT ACCEL  | SETUP PARAMETERS::RAMPS                 | Ramps          | 0 : DISABLED<br>1 : ENABLED  | a4 | 4     |
| 5   | RAMP INPUT      | SETUP PARAMETERS::RAMPS                 | Ramps          | -105.00 to 105.00 %          | a5 |       |
| 6   | RATIO 1         | SETUP PARAMETERS::SETPOINT SUM 1        | Setpoint Sum 1 | -3.0000 to 3.0000            | a6 |       |
| 7   | RATIO 2 (A3)    | SETUP PARAMETERS::SPEED LOOP::SETPOINTS | Speed Loop     | -3.0000 to 3.0000            | a7 |       |
| 8   | SIGN 1          | SETUP PARAMETERS::SETPOINT SUM 1        | Setpoint Sum 1 | 0 : NEGATIVE<br>1 : POSITIVE | a8 |       |
|     | SIGN 2 (A3)     | SETUP PARAMETERS::SPEED LOOP::SETPOINTS | Speed Loop     | 0 : NEGATIVE<br>1 : POSITIVE |    |       |

*Example only*

## ASCII Communications

Data can be transferred in two formats: ASCII or Binary, i.e. a value of 100 is represented by the three ASCII characters 1, 0, 0; or by the Binary equivalent of 100 in 16 bit data format, 0064 Hex.

### What Information Can I Transfer?

The data transfer sequence in the ASCII mode offers the following facilities:

- i) Parameter enquiry (known as polling)
  - a. Single Parameter Poll
  - b. Continuous Polling of a Parameter
  - c. Sequential Polling (fast polling down the parameter list)
- ii) Setting parameters (known as selection)
  - a. Single Parameter Selection
  - b. Continuous Selection of a Parameter
  - c. Sequential Selection (fast selection down the parameter list)

**Note:** For examples of all the above refer to "Transferring Data - ASCII Example Messages", page 21.

### How is the Information Transferred?

There are two types of data transfer message:

1. Reading information from the Drive
2. Writing information to the Drive

In both cases the supervisor must have an established connection with the device, which will then respond. The role of master and slave exchanges during the transfer.

A message consists of a sequence of characters which we identify as

- Control Characters
- Instrument Address
- Parameter Mnemonic
- Data

**Note:** Refer to "El Bisynch ASCII Message Protocol" page 16, where these four types of character are discussed in detail.

The following events take place in transmitting a successful message:


- Establish Connection
- Enquiry or Set Parameter
- Response
- Further Transmission and/or Termination

#### Establish Connection

Connection is established with a particular device by sending its two-digit address (i.e. INSTRUMENT ADDRESS as above).


You can set the address in the TEC OPTION menu.

#### 590+, 590+DRV MMI Menu Map

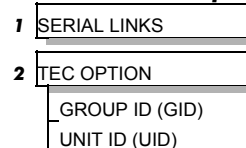

#### 690+, 605A&B 605C

#### MMI Menu Map

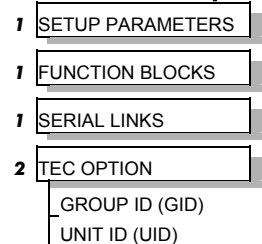

#### Enquiry or Set Parameter

The message is either an enquiry (reading information from the Drive), or a message to set a parameter (writing information to the Drive).

## Response to a 'Set Parameter' Message

The Drive will respond to a Set Parameter message in one of three ways:

1. Positive Acknowledgement (ACK)
2. Negative Acknowledgement (NAK)
3. No Reply: Under certain circumstances the supervisor may not receive a reply from the Drive. This could be due to any of the following reasons:

- Group/Unit address identifiers not recognised.
- An error (e.g. parity) is found in one or more of the characters up to and including (ENQ).
- Communications loop failure perhaps due to noise or wrong Baud Rate being selected.
- Hardware failure.
- Serial link is disabled on the Operator Station.

In these cases the supervisor should be programmed to "time-out", i.e. wait for a response for a short time (160 msec minimum) before trying again.

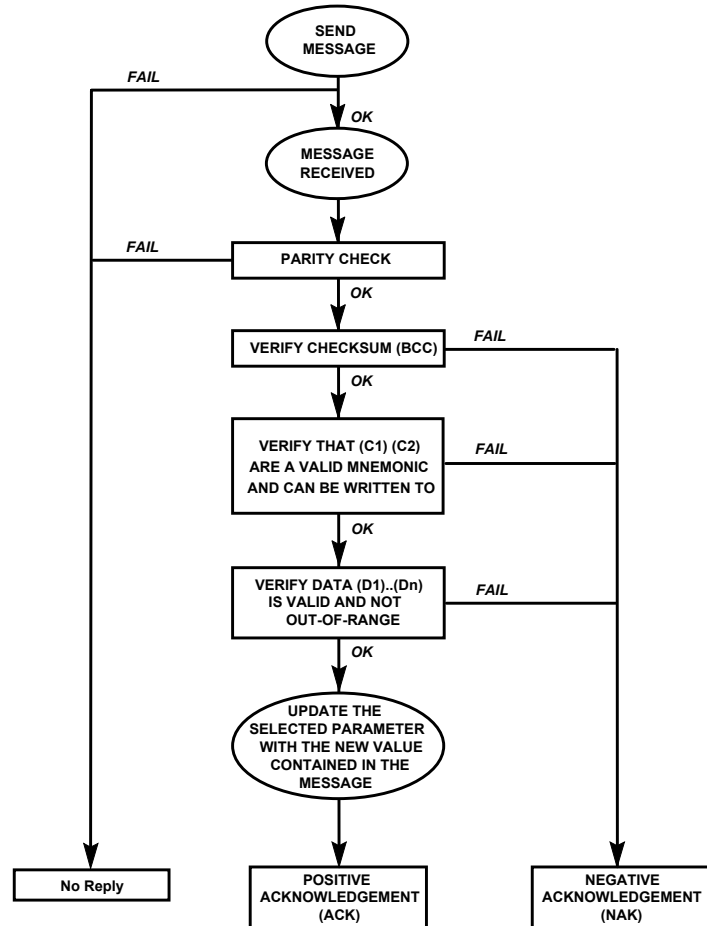


Figure 8 Drive Response Sequence to an ASCII Selection Message

## Further Transmission and/or Termination

### Further Transmission

If the supervisor still has an established connection with the device, you can repeat the previous message without re-establishing connection.

In both cases, writing to or reading from the device, you can use this to re-select the previous parameter or to select the next parameter in the parameter list. Refer to "Transferring Data - ASCII Example Messages", page 21 for further explanation.

### Termination (EOT)

If you wish to terminate connection with a particular device and establish connection with another, send the 'Establish Connection' sequence preceded by the (EOT) control character, (End Of Transmission).

The (EOT) character resets all devices on the data link to be responsive to the next four characters, i.e. the (GID)(GID)(UID)(UID) address.

- In 4-wire operation, an (EOT) can be sent at any time, including when the device has Master status.
- In 2-wire operation, an (EOT) can only be sent when the supervisor has Master status.

## Programmer's Information

### ASCII (American Standard Code for Information Interchange)

The RS485 Option communicates using ASCII, a binary code which represents letters, digits, and control signals (collectively called characters).

The code, originated by the American National Standards Institute (ANSI), has become a world-wide standard for information interchange. It uses a seven bit binary word to represent all the letters, digits, punctuation marks and control signals.

#### Handling of Numerical Data

(Format 21 - Free Format Numeric)

Numerical Data is transferred as a string of characters. The length of the string required to transmit the data value is determined by the value itself, however, no leading zeros are added to pad out the string length and trailing zeros are omitted, i.e.

1.00, 1.0, 1. or 1 is converted to 1  
 -2.20 or -2.2 is converted to -2.2

#### Handling of Status Information

(Format 23 - Hexadecimal)

Status Information is transmitted by first encoding the data into a hexadecimal format. The length of a string is then determined by the number of characters in the encoded data. The hexadecimal data is preceded by a '>' sign to differentiate it from numerical data.

**Note:** Hexadecimal refers to the common practice of counting to the base of 16 in computing rather than the base of 10. The sixteen `numbers' used being 0 to 9, A to F. Thus an 8 bit byte is represented by two characters in the range 00 to FF, while a 16 bit word is represented by four characters in the range 0000 to FFFF.

#### Block Check Character (BCC)

This is a checksum value generated by taking the exclusive OR (XOR) of the ASCII values of all the characters transmitted after and excluding (STX) up to and including (ETX). For example, the shaded characters are included in the (BCC) of the following message:

|       |       |       |       |       |       |      |      |      |      |      |       |       |
|-------|-------|-------|-------|-------|-------|------|------|------|------|------|-------|-------|
| (EOT) | (GID) | (GID) | (UID) | (UID) | (STX) | (C1) | (C2) | (D1) | (D2) | (D3) | (ETX) | (BCC) |
|-------|-------|-------|-------|-------|-------|------|------|------|------|------|-------|-------|

Example 5: Set Parameter

#### For Beginners:

You can calculate this easily by converting the ASCII values to Binary and progressively adding the Binary values together, obeying the following rules:

$$\begin{array}{cccc} 0^+ & 1^+ & 1^+ & 0^+ \\ 0 & 1 & 0 & 1 \\ 0 & 0 & 1 & 1 \end{array}$$

Referring to Example 5 on page 25, the calculation of (BCC) becomes:

| As Characters | HEX | ASCII | Binary                    |
|---------------|-----|-------|---------------------------|
| (C1)          | 37  | 7     | 0 1 1 0 1 1 1             |
| (C2)          | 31  | 1     | 0 1 1 0 0 0 1             |
|               |     |       | 0 0 0 0 1 1 0 (sub-total) |
| (D1)          | 33  | 3     | 0 1 1 0 0 1 1             |
|               |     |       | 0 1 1 0 1 0 1 (sub-total) |
| (D2)          | 30  | 0     | 0 1 1 0 0 0 0             |
|               |     |       | 0 0 0 0 1 0 1 (sub-total) |
| (D3)          | 2E  | .     | 0 1 0 1 1 1 0             |
|               |     |       | 0 1 0 1 0 1 1 (sub-total) |
| (ETX)         | 03  | (ETX) | 0 0 0 0 0 1 1             |
| (BCC)         | 28  | (     | 0 1 0 1 0 0 0 (TOTAL)     |

## El Bisynch ASCII Message Protocol

|                              |   |  |
|------------------------------|---|--|
| <b>Transmission Standard</b> | : | RS485  |
| <b>Protocol</b>              | : | ANSI-X3.28-2.5-B1  |
| <b>Data Rates</b>            | : | 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600 or 115200 Baud |
| <b>Character Format</b>      | : | 1 start + 7 bit ASCII data + 1 parity + 1 stop bit (10 bits)         |
| <b>Parity</b>                | : | Even   |

The Protocol defines the string or sequence of characters (called a Message) which must be sent between communicating instruments to produce specific responses. The message usually comprises:

- Control Characters
- Instrument Address
- Parameter Mnemonic
- Data

### Control Characters

Control Characters are ASCII codes that define actions rather than information. Six ASCII codes are supported:

| <i>Keyboard</i> | <i>HEX</i> | <i>ASCII</i> |                             |
|-----------------|------------|--------------|-----------------------------|
| ^B              | 02         | (STX)        | <i>Start of Text</i>        |
| ^C              | 03         | (ETX)        | <i>End of Text</i>          |
| ^D              | 04         | (EOT)        | <i>End of Transmission</i>  |
| ^E              | 05         | (ENQ)        | <i>Enquiry</i>              |
| ^F              | 06         | (ACK)        | <i>Positive Acknowledge</i> |
| ^U              | 15         | (NAK)        | <i>Negative Acknowledge</i> |

### Instrument Address

The Drive has a two-digit address, the first digit being the “group” ID number (GID) in the range 0 to 7, the second digit is a “unit” ID number (UID) in the range 0 to F. There are therefore 128 different addresses from 00 to 7F.

The Instrument Address (01 for example) is repeated in the message (i.e. 0011) for security as it is not included in a Checksum.

### Parameter Mnemonic

Each parameter in the Drive’s menu system is identified by a unique Tag Number. Information is exchanged across the system by use of a two character Mnemonic that is derived from the Tag Number.

Examples are:

- 81 : the SETPOINT 1 parameter from the SETPOINTS function block
- 3b : the I DM.D. ISOLATE parameter from the CURRENT LOOP function block

**Note:** Refer to “El Bisynch Binary Parameter **Specification Tables**”, page 35 for a full list of tag mnemonics. - see the ASCII column.

## EI Bisynch ASCII Parameter Mapping

### 1. EI Bisynch ASCII Prime Set

The following prime set parameters are supported:

| Mnemonic | Description                       | Range (HEX encoding)                                       | Access     |
|----------|-----------------------------------|--|------------|
| II       | Instrument Identity               | >0690, >0605 or >5900                                      | Read Only  |
| V0       | Main Software Version             | >0000 to >FFFF   | Read Only  |
| V1       | Operator Station Software Version | >0000 to >FFFF<br>(>0000 if not fitted)                    | Read Only  |
| V2       | Technology Box Software Version   | >0000 to >FFFF   | Read Only  |
| EE       | Last Error Code                   | >0000 to >FFFF<br>(Writing any value resets this to >00C0) | Read/Write |

### 2. Command/Status

The following Command/Status parameters are supported:

| Mnemonic | Description  | Range (Hex encoding) | Access     |
|----------|--------------|----------------------|------------|
| !1       | Command      | see below            | Write Only |
| !2       | State        | see below            | Read Only  |
| !3       | Save Command | see below            | Write Only |
| !4       | Save State   | see below            | Read Only  |

#### !1 : Command

Write-only: used to modify the state of the Inverter and to load configuration data from non-volatile memory.

| HEX Value | Description  |
|-----------|--|
| >7777     | Reset Command. Acknowledges failed restore. Loads and saves (590+ does not save) default Product Code and default Configuration (Macro 1). |
| >0101     | Restores Saved Configuration from drive's non-volatile memory.   |
| >0110     | Restores Default Configuration (Macro 0) - <i>not</i> 590+   |
| >0111     | Restores Default Configuration (Macro 1)   |
| >0112     | Restores Default Configuration (Macro 2) - <i>not</i> 590+   |
| >0113     | Restores Default Configuration (Macro 3) - <i>not</i> 590+   |
| >0114     | Restores Default Configuration (Macro 4) - <i>not</i> 590+   |
| >4444     | Exit Configuration Mode  |
| >5555     | Enter Configuration Mode   |

#### !2 : State

Read-only: used to determine the major state of the Inverter.

| HEX Value | Description                              |
|-----------|--|
| >0000     | Initialising. (Powering up )             |
| >0001     | Corrupted Product Code and Configuration |
| >0002     | Corrupted Configuration                  |
| >0003     | Restoring Configuration                  |
| >0004     | Re-Configuring Mode                      |
| >0005     | Normal Operation Mode                    |

| <b>!3 : Save Command</b>  |   |
|---|---|
| Write-only: used to save the configuration and product code in non-volatile memory. |   |
| HEX Value   | Description   |
| >0000   | Reset Command. Acknowledges (clears) any previous save error. |
| >0001   | Saves Configuration to drive's non-volatile memory.           |
| >0100   | Saves Product Code to drive's non-volatile memory.            |

| <b>!4 : Save State</b>  |             |
|---|-------------|
| Read only: used to determine the progress of a non-volatile saving operation. |             |
| HEX Value   | Description |
| >0000   | Idle        |
| >0001   | Saving      |
| >0002   | Failed      |

### 3. Tag Access

Each parameter in the Inverter's menu system is identified by a unique Tag Number. Information is exchanged across the system by use of a two character Mnemonic that is derived from the Tag Number.

**Note:** Refer to the Parameter Specification Table in the main Product Manual for a full list of tag mnemonics - see the ID/MN column. Refer to the Notes column which gives access information about each parameter.

#### Parameter Mapping

##### 690+/605A&B/605C/590+/590+DRV Algorithm

**Note:** For 590+ and 590+DRV drives, add 360 to the Tag Number when using the algorithm.

The algorithm to convert between tag number and 2 character mnemonics is:

```

if (TagNo < 1296)
{
    m = INT (TagNo / 36) (INT: the integer part)
    n = TagNo MOD 36 (MOD: the remainder)
    if m > 9 then
        char_1 = 'a' + (m - 10)
    else
        char_1 = '0' + m
    end_if
    if n > 9 then
        char_2 = 'a' + (n - 10)
    else
        char_2 = '0' + n
    }
else
{
    m = INT (TagNo - 1296) / 126
    n = (TagNo - 1296) MOD 26
    char_1 = 'a' + n
    char_2 = 'A' + m
}
end_if

```

The algorithm generates mnemonics containing only the characters '0' to '9' and 'a' to 'z'.



**4. PNO Access (590+ and 590+DRV only)**

For compatibility with the earlier 590 product, parameters may also be accessed using the ASCII PNO listed in the “EI Bisynch Binary Parameter Specification Tables”, page 35. For example, PNO 39 can be accessed with the mnemonic “27”.

**5. Encoding**

| Type   | Description                 | Encoding  | Comments   |
|--------|-----------------------------|---|--|
| BOOL   | Boolean                     | FALSE >00<br>TRUE >01   | Will accept >0 and >1  |
| WORD   | 16-bit Bitstring            | >0000 to >FFFF  | Will accept leading zero suppression, except >0  |
| INT    | 16-bit Signed Integer       | -XXXX. to XXXX.<br>-XXXX.X to XXXX.X<br>-XXX.XX to XXX.XX<br>-XX.XXX to XX.XXX<br>-X.XXXX to X.XXXX | Leading zeroes suppressed up to digit before decimal point.<br>Trailing zeroes suppressed after decimal point. |
| ENUM   | Enumerated Value ( 0 to 99) | XX.   | Leading zeroes suppressed, except 0.   |
| STRING | Printable characters.       | 'SSSSSSSSSSSSSSSS<br>where S is a printable character   | Maximum number of characters is parameter specific.  |
| STAG   | Link Source Tag No.         | -XXXX. to XXXX.   | As INT above.  |
| DTAG   | Link Destination Tag No.    | XXXX.   | As INT above.  |

*Note: The “.” in the above formats is not optional. It must be sent to conform to the EI-BISYNCH standard.*

### EI Bisynch ASCII Sequence Diagrams

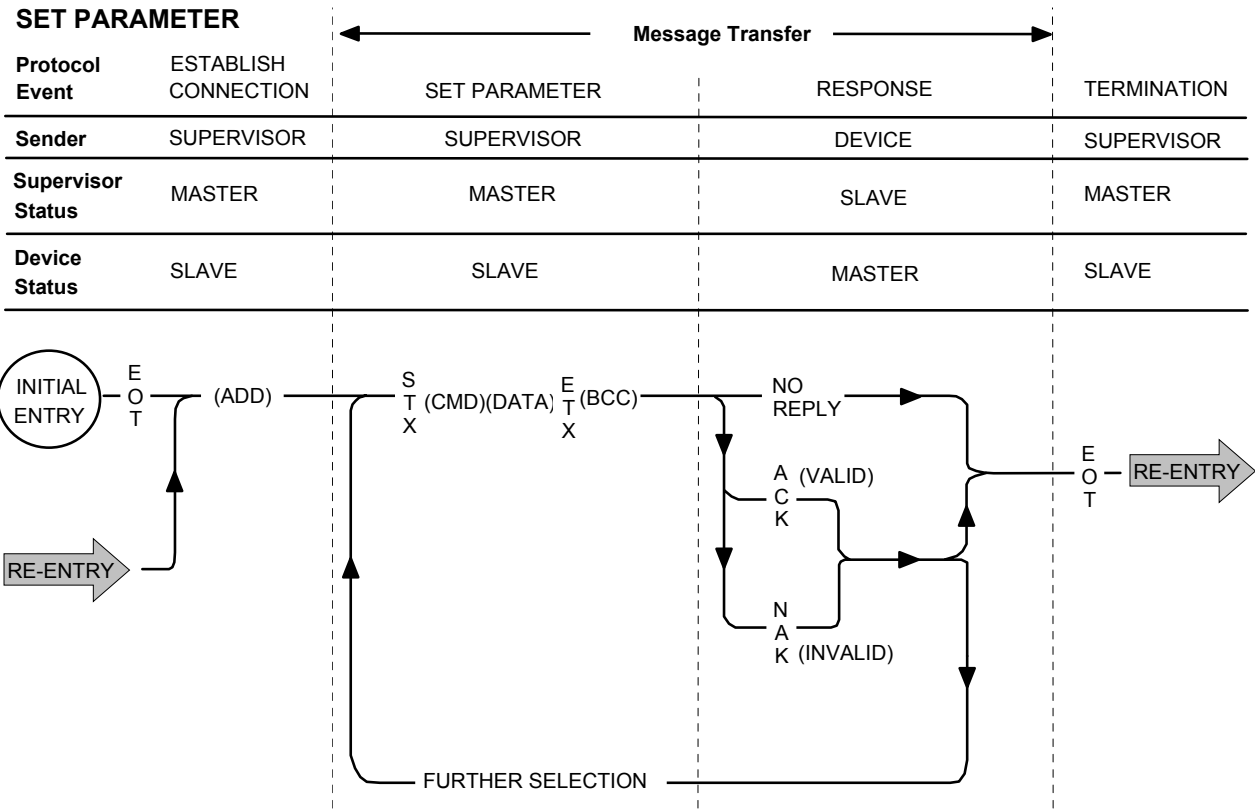


Figure 9 Selection Sequence for Writing Information to the Drive

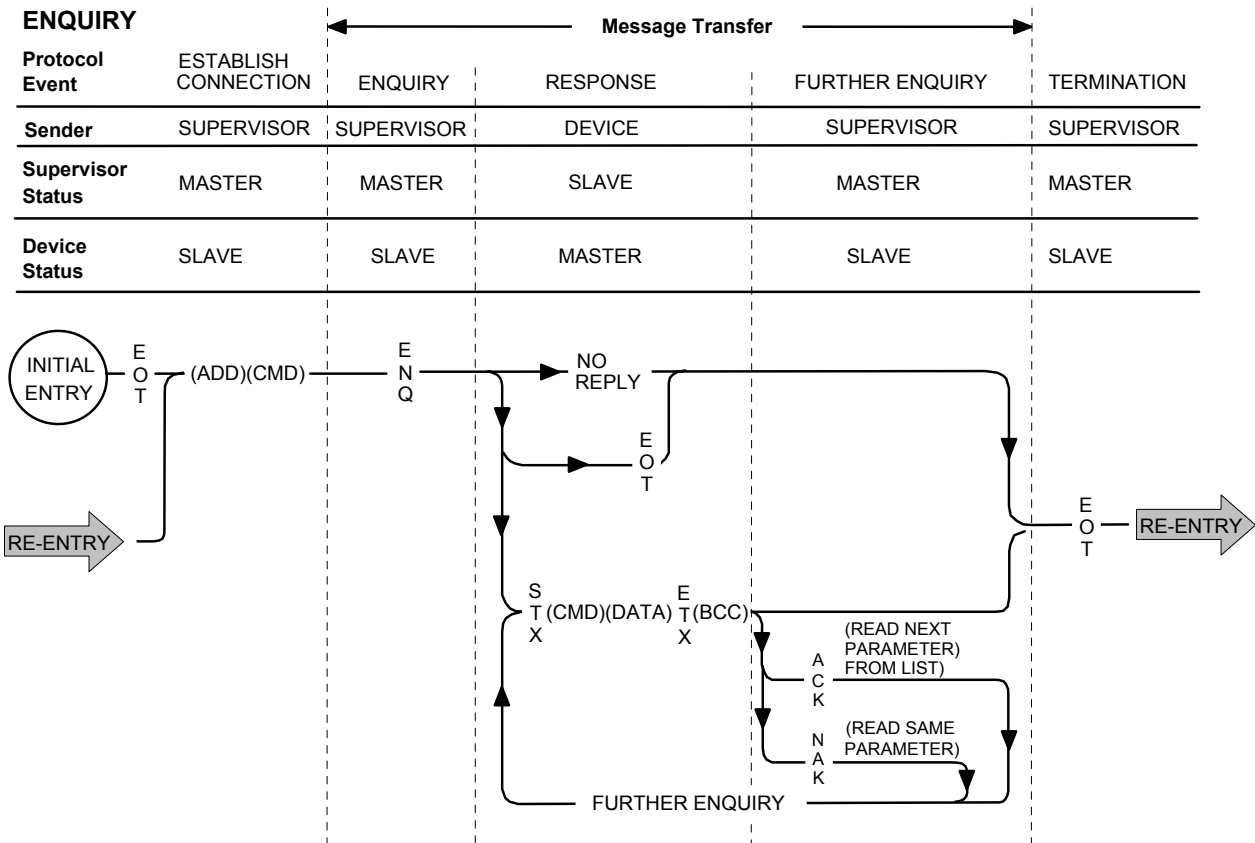


Figure 10 Poll Sequence for Reading Information from the Drive

## Transferring Data - ASCII Example Messages

The following examples show how data transfer takes place using the network, they will also help to verify your communications if you have just finished installing the COMMS Option. Many users will not become involved in generating low-level code, but for those experienced in programming, the examples include ASCII, HEX and Control Character information.

**Note:** Refer to “Control Character Definitions”, page 26 for a more detailed explanation of all control characters.

### Example 1: EI Bisynch Prime Set

**Note:** Refer to “EI Bisynch Binary Parameter Specification Tables”, page 35 for a full list of EI BISYNCH Prime Set mnemonics supported.

Using this set of mnemonics, you can enquire about the Drive. For instance, you could enquire about the Instrument Identity:

#### ENQUIRY

- *For software users:*

Enter the known address of the Drive (say 01), II, and that it is an enquiry.

- *For programmers, in ASCII:*

|       |   |   |   |   |   |   |       |
|-------|---|---|---|---|---|---|-------|
| (EOT) | 0 | 0 | 1 | 1 | 1 | 1 | (ENQ) |
|-------|---|---|---|---|---|---|-------|

- *For programmers, in HEX:*

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| 04 | 30 | 30 | 31 | 31 | 49 | 49 | 05 |
|----|----|----|----|----|----|----|----|

- *As Characters - Establish Connection | Ask Question:*

|       |       |       |       |       |      |      |       |
|-------|-------|-------|-------|-------|------|------|-------|
| (EOT) | (GID) | (GID) | (UID) | (UID) | (C1) | (C2) | (ENQ) |
|-------|-------|-------|-------|-------|------|------|-------|

**Note:** The (GID)(UID) address is always entered twice. Refer to “Instrument Address”, page 16 for a more detailed explanation.

#### RESPONSE

- *For software users:*

The Instrument Identity will be returned, in our case 5900 (representing a 590+ Drive)

- *For programmers, in ASCII:*

|       |   |   |   |   |   |   |   |       |   |
|-------|---|---|---|---|---|---|---|-------|---|
| (STX) | I | I | > | 5 | 9 | 0 | 0 | (ETX) | 1 |
|-------|---|---|---|---|---|---|---|-------|---|

- *For programmers, in HEX:*

|    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|
| 02 | 49 | 49 | 3E | 35 | 39 | 30 | 30 | 03 | 31 |
|----|----|----|----|----|----|----|----|----|----|

- *As Characters - Valid Response:*

|       |      |      |      |      |      |      |      |       |       |
|-------|------|------|------|------|------|------|------|-------|-------|
| (STX) | (C1) | (C2) | (D1) | (D2) | (D3) | (D4) | (D5) | (ETX) | (BCC) |
|-------|------|------|------|------|------|------|------|-------|-------|

**Note:** The BCC checksum (XOR) of the data after and excluding (STX) up to and including (ETX) is “1” and >31. Refer to “Block Check Character (BCC)”, page 15 for a more detailed explanation.

In Example 1, connection to a new device is being made, i.e. the “Establish Connection” information is transmitted. However, these examples can be transmitted without the “Establish Connection” information if connection to the correct device is already established. This is shown by Examples 3, 5 & 6.

**Example 2: Tag Access (Single Parameter Poll)**

Here we ask a question of a single parameter: *what is the value of SETPOINT 1?* The example below is for a 590+ product.

(Tag 289, SETPOINT 1, ID 81, Type INT - see the Parameter Specification Table in the Product Manual for this information)

**ENQUIRY**

- *For software users:*

Enter the known address of the Drive (say 01), 81, and that it is an enquiry.

- *For programmers, in ASCII:*

|       |   |   |   |   |   |   |       |
|-------|---|---|---|---|---|---|-------|
| (EOT) | 0 | 0 | 1 | 1 | 8 | 1 | (ENQ) |
|-------|---|---|---|---|---|---|-------|

- *For programmers, in HEX:*

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| 04 | 30 | 30 | 31 | 31 | 38 | 31 | 05 |
|----|----|----|----|----|----|----|----|

- *As Characters - Establish Connection | Ask Question:*

|      |       |      |       |       |      |      |       |
|------|-------|------|-------|-------|------|------|-------|
| (EOT | (GID) | GID) | (UID) | (UID) | (C1) | (C2) | (ENQ) |
|------|-------|------|-------|-------|------|------|-------|

**Note:** The (GID)(UID) address is always entered twice.  
Refer to "Instrument Address", page 16 for a more detailed explanation.

**RESPONSE**

- *For software users:*

The SETPOINT 1 value will be returned, say 30. (representing 30.00%)

- *For programmers, in ASCII:*

|       |   |   |   |   |   |       |   |
|-------|---|---|---|---|---|-------|---|
| (STX) | 8 | 1 | 3 | 0 | . | (ETX) | ` |
|-------|---|---|---|---|---|-------|---|

- *For programmers, in HEX:*

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| 02 | 38 | 31 | 33 | 30 | 2E | 03 | 27 |
|----|----|----|----|----|----|----|----|

- *As Characters - Valid Response:*

|       |      |      |      |      |      |       |       |
|-------|------|------|------|------|------|-------|-------|
| (STX) | (C1) | (C2) | (D1) | (D2) | (D3) | (ETX) | (BCC) |
|-------|------|------|------|------|------|-------|-------|

**Note:** The BCC checksum (XOR) of the data after and excluding (STX) up to and including (ETX) is "`" and >27. Refer to "Block Check Character (BCC)", page 15 for a more detailed explanation.

**Example 3: Tag Access (Continuous Polling of a Parameter)**

After receiving a valid response (from Example 2), you can cause the Drive to repeat that response without having to re-establish the connection. You can use this to continuously monitor a parameter.

**ENQUIRY**

- *For software users:*  
Send (NAK).

- *For programmers, in ASCII:*

|       |  |  |  |  |  |  |  |  |  |
|-------|--|--|--|--|--|--|--|--|--|
| (NAK) |  |  |  |  |  |  |  |  |  |
|-------|--|--|--|--|--|--|--|--|--|

- *For programmers, in HEX:*

|    |  |  |  |  |  |  |  |  |  |
|----|--|--|--|--|--|--|--|--|--|
| 15 |  |  |  |  |  |  |  |  |  |
|----|--|--|--|--|--|--|--|--|--|

- *As Characters - Repeat Parameter:*

|       |  |  |  |  |  |  |  |  |  |
|-------|--|--|--|--|--|--|--|--|--|
| (NAK) |  |  |  |  |  |  |  |  |  |
|-------|--|--|--|--|--|--|--|--|--|

**RESPONSE**

The response will be as for Example 2, however the returned data will be an updated value, i.e. SETPOINT 1 may now be 32. (representing 32.00%).

**Example 4: Tag Access (Single Parameter Selection)**

Here we are writing a value to a single parameter: *the value of TAKE UP 1 is 30.00%*. The example below is for a 590+ product.

**SET PARAMETER**

(Tag 253, TAKE UP 1, ID 71, Type INT - see the Parameter Specification Table for this information)

- **For software users:**  
Enter the known address of the Drive (say 01), (STX), 71, 30. and (ETX).
- **For programmers, in ASCII:**

|       |   |   |   |   |       |   |   |   |   |   |       |   |
|-------|---|---|---|---|-------|---|---|---|---|---|-------|---|
| (EOT) | 0 | 0 | 1 | 1 | (STX) | 7 | 1 | 3 | 0 | . | (ETX) | ( |
|-------|---|---|---|---|-------|---|---|---|---|---|-------|---|

- **For programmers, in HEX:**

|    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 04 | 30 | 30 | 31 | 31 | 02 | 37 | 31 | 33 | 30 | 2E | 03 | 28 |
|----|----|----|----|----|----|----|----|----|----|----|----|----|

- **As Characters - Establish Connection | Data Transfer:**

|       |       |       |       |       |       |      |      |      |      |      |       |       |
|-------|-------|-------|-------|-------|-------|------|------|------|------|------|-------|-------|
| (EOT) | (GID) | (GID) | (UID) | (UID) | (STX) | (C1) | (C2) | (D1) | (D2) | (D3) | (ETX) | (BCC) |
|-------|-------|-------|-------|-------|-------|------|------|------|------|------|-------|-------|

**Note:** The (GID)(UID) address is always entered twice.  
Refer to "Instrument Address", page 16 for a more detailed explanation.

The BCC checksum (XOR) of the data after and excluding (STX) up to and including (ETX) is "(" and >28. Refer to "Block Check Character (BCC)", page 15 for a more detailed explanation.

**RESPONSE**

- **For software users:**  
The response will be either (ACK), (NAK) or no reply. If (ACK), the parameter value will be updated at the Drive.

- **For programmers, in ASCII:**

|                                 |
|---------------------------------|
| either (ACK), (NAK) or no reply |
|---------------------------------|

- **For programmers, in HEX:**

|                           |
|---------------------------|
| either 06, 15 or no reply |
|---------------------------|

- **As Characters:**

|                                 |
|---------------------------------|
| either (ACK), (NAK) or no reply |
|---------------------------------|

**Example 5: Tag Access (Continuous Selection of a Parameter)**

You can repeat a valid selection (from Example 4) without having to re-establish connection to the Drive. You can use this to continuously update a parameter. Lets say the new value is 35. (representing 35.00%).

**SET PARAMETER**

- *For software users:*  
Send (STX), 71, 35. and (ETX).
- *For programmers, in ASCII:*

|       |   |   |   |   |   |       |   |
|-------|---|---|---|---|---|-------|---|
| (STX) | 7 | 1 | 3 | 5 | . | (ETX) | - |
|-------|---|---|---|---|---|-------|---|

- *For programmers, in HEX:*

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| 02 | 37 | 31 | 33 | 35 | 2E | 03 | 2D |
|----|----|----|----|----|----|----|----|

- *As Characters - Data Transfer:*

|       |      |      |      |      |      |       |       |
|-------|------|------|------|------|------|-------|-------|
| (STX) | (C1) | (C2) | (D1) | (D2) | (D3) | (ETX) | (BCC) |
|-------|------|------|------|------|------|-------|-------|

**Note:** The BCC Checksum is the result of the new value you are sending to the Drive. Refer to “Block Check Character (BCC)”, page 15 for a more detailed explanation.

**RESPONSE**

- *For software users:*  
The response will be either (ACK), (NAK) or no reply. If (ACK), the parameter value will be updated at the Drive.

- *For programmers, in ASCII:*

|                                 |
|---------------------------------|
| either (ACK), (NAK) or no reply |
|---------------------------------|

- *For programmers, in HEX:*

|                           |
|---------------------------|
| either 06, 15 or no reply |
|---------------------------|

- *As Characters:*

|                                 |
|---------------------------------|
| either (ACK), (NAK) or no reply |
|---------------------------------|

**Example 6: Tag Access (Sequential Selection)**

You can also repeat a valid selection (as Example 5) without having to re-establish the connection to the Drive to update any other specified parameter. Lets say the next parameter you want to update is I DMD. ISOLATE whose new value is to be ENABLED (1). The example below is for a 590+ product.

(Tag 119, I DMD. ISOLATE , ID 3b, Type BOOL - see the Parameter Specification Table for this information)

**SET PARAMETER**

- *For software users:*  
Send (STX), 3b, 1 and (ETX).
- *For programmers, in ASCII:*

|       |   |   |   |   |   |       |   |
|-------|---|---|---|---|---|-------|---|
| (STX) | 3 | b | > | 0 | 1 | (ETX) | m |
|-------|---|---|---|---|---|-------|---|

- *For programmers, in HEX:*

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| 02 | 33 | 62 | 3E | 30 | 31 | 03 | 6D |
|----|----|----|----|----|----|----|----|

- *As Characters - Data Transfer:*

|       |      |      |   |      |      |       |       |
|-------|------|------|---|------|------|-------|-------|
| (STX) | (C1) | (C2) | > | (D1) | (D2) | (ETX) | (BCC) |
|-------|------|------|---|------|------|-------|-------|

**Note:** The BCC Checksum is the result of the new information you are sending to the Drive.

**RESPONSE**

The response will be as for Example 5.

**Character Definitions**

| Standard Character Definitions |   |
|--------------------------------|---|
| (GID)                          | The Group address Identifier (repeated for security)  |
| (UID)                          | The Unit address identifier (repeated for security)   |
| (C1) (C2)                      | The two characters of the parameter mnemonic (from the Tag number)  |
| (D1)..(Dn)                     | The value of the requested parameter (string may be any length, determined by the data).  |
| (BCC)                          | Block Check Character: a character generated by taking the exclusive OR (XOR) of the ASCII values of all the characters transmitted after and excluding (STX) up to and including (ETX) |

**Control Character Definitions**

| Standard Control Character Definitions |   |
|--|---|
| (STX)                                  | Start of text   |
| (ETX)                                  | End of text   |
| (EOT)                                  | End of Transmission: resets all instruments on the link and causes them to examine the next four transmitted characters to see if they correspond with their Group/Unit address identifiers<br><br>Also sent to terminate communication with a particular device. |



| Control Character Definitions when Reading Information |  |
|--|--|
| (ENQ)  | Indicates the end of the message, and that it is an enquiry  |
| (ACK)  | Sequential Polling: when transmitted after a valid response, this fetches data from the next parameter in the parameter list |
| (NAK)  | Continuous Polling: when transmitted after a valid response, this fetches data from the previously requested parameter       |
| (EOT)  | The information received contained an error  |

| Control Character Definitions when Writing Information |  |
|--|--|
| (ACK)  | Positive Acknowledgement: the message was correctly received and the parameter updated                           |
| (NAK)  | Negative Acknowledgement: the message received by the drive contained an error and the parameter was not updated |

## Last Error Code (EE)

The EI-BISYNCH Prime Set contains the EE mnemonic. This is also an output parameter in the TEC OPTION function block, where the parameter value can be read and reset. Refer to “Configuring the Drive”, page 10.

The following values are returned if an enquiry (reading information from the drive) is performed on this Read/Write parameter.

Writing any value to this parameter will set the value to >00C0. Clearing the last error value may be useful in seeing a repetitive error re-occurring.

| Value | Description                                 |
|-------|---|
| >00C0 | No error                                    |
| >01C7 | Invalid Mnemonic                            |
| >02C2 | Checksum (BCC) error                        |
| >04C8 | Attempt to read from a write-only parameter |
| >05C8 | Attempt to write to a read-only parameter   |
| >07C8 | Invalid Data (Encoding error)               |
| >08C8 | Data out of range                           |

# Initial Set-up for EI Bisynch Binary



## Configuring the Drive

Begin by configuring the drive to accept the Technology Option. Use the keypad (MMI), or ConfigEd Lite to configure the TEC OPTION function block parameters inside the drive before commissioning the RS485 technology option.

The parameter names and functions in this function block are inter-dependent and will change with different parameter values and various Options that can be fitted.

Fit the RS485 option to the drive:

- For the 605 and 690+ drives, navigate to the VIEW LEVEL parameter and select ADVANCED. This allows you to view the TEC OPTION menu.

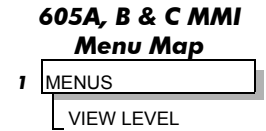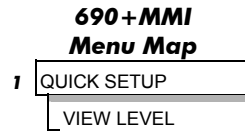

- Navigate to the TEC OPTION menu and:
  - Select RS485 in the TYPE parameter
  - Select EI BINARY in the PROTOCOL parameter
  - Select the Baud Rate
  - Enter a GID address (if required)
  - Enter a UID address (if required)
  - Check the FAULT parameter for error messages and rectify if necessary

**Note:** When using the MMI, remember to save the set-up via the Parameter Save or Config Save menu.

When setting values for parameters from ConfigEd Lite (or other suitable PC programming tool) you are able to select any value in the parameter's range, i.e. -32768 to 32767. If the value is incorrect, i.e. it doesn't correspond to a value that can be set using the MMI, then the FAULT output parameter will be set to PARAMETER.


**Note:** ConfigEd Lite is Parker SSD Drives' Windows-based block programming software.

## The EI BISYNCH Binary MMI View

With the RS485 option correctly installed, the TEC OPTION function block will contain the following parameter names when viewed using the MMI.

| Tec Option |                      |            |
|------------|----------------------|------------|
|            | FAULT                | [756] NONE |
|            | VERSION              | [757] 0000 |
|            | ERROR CODE           | [758] 00C0 |
|            | ERROR COUNT          | [759] 0    |
| RS485      | [750] TYPE           |            |
| EI ASCII   | [751] PROTOCOL       |            |
| 9600       | [752] BAUD RATE      |            |
| 0          | [753] GROUP ID (GID) |            |
| 0          | [754] UNIT ID (UID)  |            |
| FALSE      | [755] ERROR RESET    |            |

**EI BISYNCH Binary ConfigEdLite view**


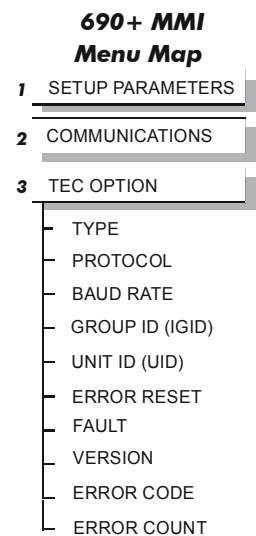


*SERIAL LINKS is at Menu Level 1 for the 590+ and 590+DRV and contains the TEC*

## The Non-specific ConfigEd-Lite & MMI View

This is how the TEC OPTION function block looks when viewed using ConfigEd-Lite.

The MMI also displays these non-specific parameter names when the RS485 option is not yet installed into the drive, or an incorrect TYPE is selected for the fitted Option.

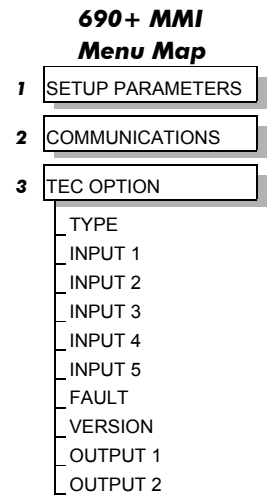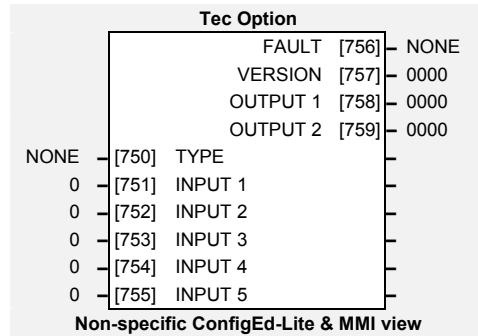

## MMI Parameter Descriptions for EI Bisynch Binary

### TYPE

*Range: Enumerated - see below*

Selects the type of Technology Option. The TYPE parameter is automatically set when defaults are loaded if a Technology Option is present.

*Enumerated Value : Technology Option*

- 0 : NONE
- 1 : **RS485**
- 2 : PROFIBUS DP
- 3 : LINK
- 4 : DEVICENET
- 5 : CANOPEN
- 6 : LONWORKS
- 7 : CONTROLNET
- 8 : MODBUS PLUS
- 9 : ETHERNET

### PROTOCOL

*Range: Enumerated - see below*

Selects the protocol to be used.

*Enumerated Value : Protocol*

- 0 : EI ASCII (default)
- 1 : **EI BINARY**
- 2 : MODBUS RTU

### BAUD RATE

*Range: Enumerated - see below*

Selects the Baud Rate.

*Enumerated Value : Baud Rate*

- 0 : 300
- 1 : 600
- 2 : 1200
- 3 : 2400
- 4 : 4800
- 5 : 9600 (default)
- 6 : 19200
- 7 : 38400
- 8 : 57600
- 9 : 115200

**GROUP ID (GID)***Range: 0 to 7*

The Parker SSD Drives protocol group identity address.

**UNIT ID (UID)***Range: 0 to 15*

The Parker SSD Drives protocol unit identity address.

**ERROR RESET***Range: FALSE/TRUE*

When TRUE, clears the ERROR CODE parameter (setting it to 00C0) and sets the ERROR COUNT parameter to zero.

**FAULT***Range: Enumerated - see below*

The fault state of the Technology Option.

|                   |                                 |
|-------------------|---------------------------------|
| 0 : NONE          | no faults                       |
| 1 : PARAMETER     | parameter out-of-range          |
| 2 : TYPE MISMATCH | TYPE parameter not set to RS485 |
| 3 : SELF TEST     | hardware fault - internal       |
| 4 : HARDWARE      | hardware fault - external       |
| 5 : MISSING       | no option fitted                |

Also refer to “Module LED”, page 8.

**VERSION***Range: 0x0000 to 0xFFFF*

The version of the Technology Option card. If no option is fitted then the version is reset to zero.

**ERROR CODE***Range: 0x0000 to 0xFFFF*

Displays the last error as a hexadecimal code. Refer to “Last Error Code (EE)”, page 27 for a list of codes.

**ERROR COUNT***Range: 0 to 9999*

Increments each time an error is detected.

Note: will stop counting at 9999 (see ERROR RESET).

## Configuring the PLC/SCADA Supervisor

By referring to the EI Bisynch Binary Parameter Specification Tables in this manual, page 35, you can enter the parameter information required.

## Binary Communications

This mode has many similarities with the ASCII mode, and so what follows is a summary of the differences to the ASCII mode.

### Character Format

Each byte is transmitted as 11 bits rather than adapting the 10-bit format used by the ASCII mode. The format is represented by the following:-

|   |                       |   |
|---|-----------------------|---|
| 1 | Start bit (low)       |   |
| 7 | Data bits (LSB first) |   |
| 1 | Control bit *         |   |
| 1 | Even parity bit       |   |
| 1 | Stop bit (high)       | * 0 = Control character, 1 = Data character |

### How is the Information Transferred?

During serial communications, Drive acts as a slave and responds to messages sent from the Supervisor. Messages received from the Supervisor are categorised into Main Messages and Continuation Messages.

The Binary mode introduces several different Control and Data Characters. Refer to “EI Bisynch Binary Message Protocol”, page 32.

### Response to a `Selection' Message

The response is very similar to the ASCII mode but differs in that the ASCII (GID)/(UID) address is replaced by the Binary (INO), Instrument Number. Also, the ASCII parameter mnemonic (C1)(C2) is replaced by the Binary (PNO) character.

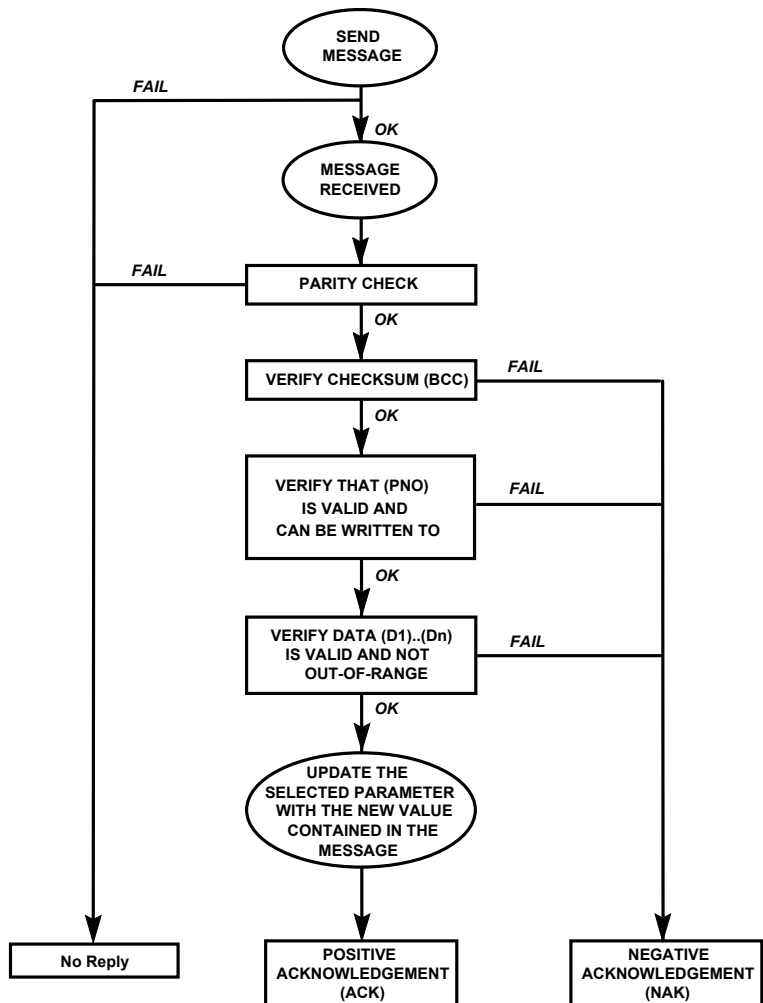


Figure 11 Converter Response Sequence to a Binary Selection Message

## EI Bisynch Binary Message Protocol

|                              |   |  |
|------------------------------|---|--|
| <b>Transmission Standard</b> | : | RS485 (RS422 bi-directional)   |
| <b>Protocol</b>              | : | ANSI-X3.28-2.5-B1  |
| <b>Data Rates</b>            | : | 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600 or 115200 Baud |
| <b>Character Format</b>      | : | 1 start + 8 bit ASCII data + 1 parity + 1 stop bit (11 bits)         |
| <b>Parity</b>                | : | Even   |

## Transferring Data - Binary Example Messages

There are two message types:

1. Main Messages
2. Continuation Messages

### Main Messages

The main messages are in four types:

#### SELECTION

The Supervisor writes to one parameter. The (BCC) character contains the checksum of all characters following the (STX).

|       |       |       |       |       |      |      |      |       |       |
|-------|-------|-------|-------|-------|------|------|------|-------|-------|
| (EOT) | (INO) | (CCC) | (STX) | (PNO) | (D1) | (D2) | (D3) | (ETX) | (BCC) |
|-------|-------|-------|-------|-------|------|------|------|-------|-------|

#### POLLING

The Supervisor requests to read the value of one parameter.

|       |       |       |       |       |
|-------|-------|-------|-------|-------|
| (EOT) | (INO) | (PNO) | (CCC) | (ENQ) |
|-------|-------|-------|-------|-------|

#### ENQUIRY POLLING

The Supervisor requests to read all parameters in block 1.

|       |       |       |       |
|-------|-------|-------|-------|
| (EOT) | (INO) | (CCC) | (ENQ) |
|-------|-------|-------|-------|

#### MULTI-PARAMETER POLLING

The Supervisor requests to read a given number of parameters. That number is referred to as the count number (CNO), it is included in the request message and the reply will be sent by the drive, in blocks of up to 8 parameters.

|       |       |       |       |       |       |
|-------|-------|-------|-------|-------|-------|
| (EOT) | (INO) | (PNO) | (CNO) | (CCC) | (ENQ) |
|-------|-------|-------|-------|-------|-------|

**Note:** The (CCC) is the checksum of the characters following an (EOT) and is therefore equal to (INO) in Selection and Enquiry Polling messages.

**Continuation Messages**

There are two types of continuation messages sent by the Supervisor:

**NEXT (send next item from a list)**

Only valid if sent following a multi-parameter poll.

(ACK)

**REPEAT (repeat last response)**

Only valid if sent following any type of poll. It requests a repetition of the previous response.

(NAK)

**Serial Transmission Responses**

**SELECTION MESSAGE RESPONSE (one character)**

Sent after the correct reception of a Selection message.

(ACK)

**FAULT DETECTION RESPONSE (one character)**

Sent in the case of detecting a fault.

(NAK) or (EOT)

**POLLING MESSAGE RESPONSE (more than one character)**

(STX) (PNO) (D1) (D2) (D3) (ETX) (BCC)

**MULTI-POLLING MESSAGE RESPONSE (more than one character)**

The response can consist of a group of messages (blocks). The (ETX) character is only sent at the end of the last block (as for Polling Message Response above). For other blocks, the (ETX) is replaced by an (ETB) to indicate an end of a block rather than the end of the response.

**Control Character Definitions**

| Standard Control Character Definitions |   |
|--|---|
| (EOT)                                  | End of Transmission (commands the slave to stop transmitting and wait to be addressed)  |
| (STX)                                  | Start of Text.  |
| (ENQ)                                  | Enquiry (sent by the master as the last character of any type of polling message)   |
| (ETX)                                  | End of Text (is followed by the checksum)   |
| (ETB)                                  | End of Block (sent instead of (ETX) when replying to a multi parameter enquiry). It indicates the end of a block, but not the end of a message. |
| (ACK)                                  | Positive Acknowledgement  |
| (NAK)                                  | Negative Acknowledgement  |

## Data Character Definitions

| Standard Data Character Definitions |   |
|-------------------------------------|---|
| (INO)                               | Instrument Number (contains the address of the slave drive and is equivalent to the combination of the GID, UID characters of the ASCII mode)   |
| (PNO)                               | Parameter Number (equivalent to the combination of the (C1) and (C2) characters of the ASCII mode and is sent as a hexadecimal number rather than two ASCII characters)   |
| (D1), (D2) and (D3)                 | <p>These characters include the mode name and value read from, or to be written to, one of the parameters.</p> <p>A data character is represented by setting its MSB (bit 7). The contents of these characters are as follows:</p> <p style="text-align: center;">D1 :            bits 2 [→]            6            mode number</p> <p style="text-align: center;"><i>Number format is:</i></p> <p style="text-align: center;">0 = XXXX<br/>1 = XXX.X<br/>2 = XX.XX<br/>3 = X.XXX<br/>4 = .XXXX</p> <p style="text-align: center;">D2 :            bits 0 and 1            bits 14 and 15 of the value.<br/>                 bits 0 [→] 6            bits 7 to 13 of the value.</p> <p style="text-align: center;">D3 :            bits 0 [→] 6            bits 0 to 6 of the value.</p> |
| (CCC)                               | Connection Check Control (contains the checksum of all the characters following the (EOT) character in the message)   |
| (BCC)                               | Block Check Character (checksum value generated by taking the exclusive OR (XOR) of the ASCII values of all characters transmitted after and excluding (STX) up to and including (ETX).   |

## List of PNO Assignments

The serial link parameter numbers (PNO) include dedicated parameters, and also 16 configurable parameters. These vary with each Drive type.

### 590+ and 590+DRV

The 16 configurable parameters have PNO's 112 to 127. These can be made to point to any TAG number, either via the MMI (PNO CONFIG), or via the serial link.

PNO's 96 to 111 are pointers associated with PNO's 112 to 127.

For example:

**If** PNO 96 = 123, then PNO 112 will access TAG number 123.

**If** PNO 100 = 234, then PNO 116 will access TAG number 234

### 690+, 605A & B, 605C

The PRESET 7 and PRESET 8 function blocks INPUT parameters are used to specify the tag. For example:

If PRESET 7::INPUT 0 = 1.23%, then PNO 112 will access tag number 123

If PRESET 7::INPUT 4 = 2.34%, then PNO 116 will access tag number 234

## Enquiry Polling

In Enquiry Polling mode, block 1 is polled.



### El Bisynch Binary Parameter Specification Tables

| Block 0 (590+) |        |   |
|----------------|--------|---|
| PNO            | ACCESS | DESCRIPTION                                       |
| 0              | R/O    | Instrument Identifier. Same as ASCII mnemonic II. |
| 1              | R/W    | Error report. Same as ASCII mnemonic EE           |
| 2              | R/O    | Drive Software Version Number.                    |

| Block 1 (590+) |      |     |             |       |        |        |        |                        |
|----------------|------|-----|-------------|-------|--------|--------|--------|------------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION            |
|                |      |     | BINARY      | ASCII | BINARY |        |        |                        |
| 8              | 08   | 063 | -           | 21    | xxx.xx |        | R/O    | Speed Setpoint         |
| 9              | 09   | 089 | -           | 21    | xxx.xx |        | R/O    | Speed Demand           |
| 10             | 0A   | 062 | -           | 21    | xxx.xx |        | R/O    | Speed Feedback         |
| 11             | 0B   | 066 | -           | 21    | xxx.xx |        | R/O    | Current Demand         |
| 12             | 0C   | 065 | -           | 21    | xxx.xx |        | R/O    | Current Feedback       |
| 13             | 0D   | 183 | -           | 21    | xxx.xx |        | R/O    | Field Demand           |
| 14             | 0E   | 181 | -           | 21    | xxx.xx |        | R/O    | Field Feedback         |
| 15             | 0F   | 115 | -           | 23    | xxxxx  |        | R/O    | Health Word            |
|                |      |     | 0           |       |        | 0/1    |        | OVERSPEED              |
|                |      |     | 1           |       |        | 0/1    |        | MISSING PULSE          |
|                |      |     | 2           |       |        | 0/1    |        | FIELD OVER I           |
|                |      |     | 3           |       |        | 0/1    |        | Fin Over Temperature   |
|                |      |     | 4           |       |        | 0/1    |        | Motor Over Temperature |
|                |      |     | 5           |       |        | 0/1    |        | OVER VOLTS (VA)        |
|                |      |     | 6           |       |        | 0/1    |        | Speed Feedback         |
|                |      |     | 7           |       |        | 0/1    |        | Encoder Failed         |
|                |      |     | 8           |       |        | 0/1    |        | Field Failed           |
|                |      |     | 9           |       |        | 0/1    |        | Three Phase Failed     |
|                |      |     | 10          |       |        | 0/1    |        | Phase Lock Loop        |
|                |      |     | 11          |       |        | 0/1    |        | 5703 Receive Error     |
|                |      |     | 12          |       |        | 0/1    |        | Stall Trip             |
|                |      |     | 13          |       |        | 0/1    |        | Over Current Trip      |
|                |      |     | 14          |       |        | 0/1    |        | Cal. Card              |
|                |      |     | 15          |       |        | 0/1    |        | ACCTS Failed           |

| Block 2 (590+) |      |     |             |       |        |        |        |                    |
|----------------|------|-----|-------------|-------|--------|--------|--------|--------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION        |
|                |      |     | BINARY      | ASCII | BINARY |        |        |                    |
| 16             | 10   | 050 | -           | 21    | xxx.xx |        | R/O    | Anin 1 (A2)        |
| 17             | 11   | 051 | -           | 21    | xxx.xx |        | R/O    | Anin 2 (A3)        |
| 18             | 12   | 052 | -           | 21    | xxx.xx |        | R/O    | Anin 3 (A4)        |
| 19             | 13   | 053 | -           | 21    | xxx.xx |        | R/O    | Anin 4 (A5)        |
| 20             | 14   | 054 | -           | 21    | xxx.xx |        | R/O    | Anin 5 (A6)        |
| 21             | 15   | 067 | -           | 21    | xxx.xx |        | R/O    | Actual Pos I Lim   |
| 22             | 16   | 061 | -           | 21    | xxx.xx |        | R/O    | Actual Neg I Lim   |
| 23             | 17   | 040 | -           | 23    | xxxxx  |        | R/O    |                    |
| -              |      | 068 | 0           |       |        | 0/1    |        | Start Input        |
| -              |      | 069 | 1           |       |        | 0/1    |        | Jog Input          |
| -              |      | 070 | 2           |       |        | 0/1    |        | Enable Input       |
| -              |      | 071 | 3           |       |        | 0/1    |        | Digital Input 1    |
| -              |      | 072 | 4           |       |        | 0/1    |        | Digital Input 2    |
| -              |      | 073 | 5           |       |        | 0/1    |        | Digital Input 3    |
| -              |      | -   | 6           |       |        | 0/1    |        | Program Stop Input |
| -              |      | -   | 7           |       |        | 0/1    |        | Coast Stop Input   |
| -              |      | 074 | 8           |       |        | 0/1    |        | Digital Output 1   |
| -              |      | 075 | 9           |       |        | 0/1    |        | Digital Output 2   |
| -              |      | 076 | 10          |       |        | 0/1    |        | Digital Output 3   |
| -              |      | -   | 11-15       |       |        | 0/1    |        | Reserved           |

| Block 3 (590+) |      |     |             |       |        |                |        |                           |
|----------------|------|-----|-------------|-------|--------|----------------|--------|---------------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS         | ACCESS | DESCRIPTION               |
|                |      |     | BINARY      | ASCII | BINARY |                |        |                           |
| 24             | 18   | 030 |             | 21    | xxx.xx | -200.00/200.00 | R/W    | Additional Current Demand |
| 25             | 19   | 015 |             | 21    | xxx.xx | 0/200.00       | R/W    | Main Current Limit        |
| 26             | 1A   | 087 |             | 21    | xxx.xx | 0/200.00       | R/O    | +ve Current Clamp         |
| 27             | 1B   | 088 |             | 21    | xxx.xx | 0/200.00       | R/O    | -ve Current Clamp         |
| 28             | 1C   | 016 |             | 21    | xxx.xx | 0/200.00       | R/W    | Current Loop P Gain       |
| 29             | 1D   | 017 |             | 21    | xxx.xx | 0/200.00       | R/W    | Current Loop I Gain       |
| 30             | 1E   | 171 |             | 21    | xxx.xx | 0/100.00       | R/W    | Field Current Setpoint    |
| 31             | 1F   | 116 |             | 23    | xxxxx  |                | R/O    | Health Store              |
|                |      |     | 0           |       |        | 0/1            |        | Over Speed                |
|                |      |     | 1           |       |        | 0/1            |        | Missing Pulse             |
|                |      |     | 2           |       |        | 0/1            |        | Field Over Current        |
|                |      |     | 3           |       |        | 0/1            |        | Fin Over Temperature      |
|                |      |     | 4           |       |        | 0/1            |        | Motor Over Temperature    |
|                |      |     | 5           |       |        | 0/1            |        | Field Over Volts          |
|                |      |     | 6           |       |        | 0/1            |        | Speed Feedback            |
|                |      |     | 7           |       |        | 0/1            |        | Encoder Fail              |
|                |      |     | 8           |       |        | 0/1            |        | Field Fail                |
|                |      |     | 9           |       |        | 0/1            |        | Three Phase               |

| Block 3 (590+) |      |     |             |       |        |        |        |                    |
|----------------|------|-----|-------------|-------|--------|--------|--------|--------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION        |
|                |      |     | BINARY      | ASCII | BINARY |        |        |                    |
|                |      |     | 10          |       |        | 0/1    |        | Phase Lock Loop    |
|                |      |     | 11          |       |        | 0/1    |        | 5703 Receive Error |
|                |      |     | 12          |       |        | 0/1    |        | Stall Trip         |
|                |      |     | 13          |       |        | 0/1    |        | Over Current Trip  |
|                |      |     | 14          |       |        | 0/1    |        | Cal. Card          |
|                |      |     | 15          |       |        | 0/1    |        | ACCTS Failed.      |

| Block 4 (590+) |      |     |             |        |                |        |        |                                |
|----------------|------|-----|-------------|--------|----------------|--------|--------|--------------------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |        |                | LIMITS | ACCESS | DESCRIPTION                    |
|                |      |     | BINARY      | ASCII  | BINARY         |        |        |                                |
| 32             | 20   | 060 | 21          | xxx.xx |                |        | R/O    | Back EMF                       |
| 33             | 21   | 058 | 21          | xxx.xx |                |        | R/O    | Analogue Tach                  |
| 34             | 22   | 059 | 21          | xxxxx  |                |        | R/O    | Encoder                        |
| 35             | 23   | 064 | 21          | xxx.xx |                |        | R/O    | Speed Error                    |
| 36             | 24   | 132 | 21          | x.xxxx | -3.0000/3.0000 |        | R/W    | P3 Setpoint Ratio              |
| 37             | 25   | 014 | 21          | xxx.xx | 0/200.00       |        | R/W    | Speed Loop P Gain              |
| 38             | 26   | 013 | 21          | xx.xxx | 0.001/ 30.000  |        | R/W    | Speed Loop Time Constant (SEC) |
| 39 *           | 27   |     | 23          | xxxxx  |                |        |        |                                |
|                |      | 161 | 0           |        |                | 0/1    | R/W    | Aux. Start                     |
|                |      | 168 | 1           |        |                | 0/1    | R/W    | Aux. Enable                    |
|                |      |     | 2.7         |        |                |        | -      | Reserved                       |
|                |      | 288 | 8           |        |                | 0/1    | R/W    | External Ramp Reset            |
|                |      | 287 | 9           |        |                | 0/1    | R/W    | Auto Reset                     |
|                |      | 113 | 10          |        |                |        | R/O    | Ramping                        |
|                |      | 303 | 11          |        |                | 0/1    | R/W    | Reset Ramp to Speed Feedback   |

| Block 5 (590+) |      |     |             |       |        |                      |        |                      |
|----------------|------|-----|-------------|-------|--------|----------------------|--------|----------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS<br>MIN TO MAX | ACCESS | DESCRIPTION          |
|                |      |     | BINARY      | ASCII | BINARY |                      |        |                      |
| 40             | 28   | 006 | 21          |       | x.xxxx | -3.0000/3.0000       | R/W    | Ratio 1              |
| 41             | 29   | 007 | 21          |       | x.xxxx | -3.0000/3.0000       | R/W    | Ratio 2              |
| 42             | 2A   | 086 | 21          |       | xxx.xx |                      | R/O    | Set Point Sum Output |
| 43             | 2B   | 002 | 21          |       | xxx.x  | 0.1/600.0            | R/W    | Ramp Accel. Time     |
| 44             | 2C   | 003 | 21          |       | xxx.x  | 0.1/600.0            | R/W    | Ramp Decel. Time     |
| 45             | 2D   | 085 | 21          |       | xxx.xx | -                    | R/O    | Ramp Output          |
| 46             | 2E   | 041 | 21          |       | xxx.xx | -100.00/100.00       | R/W    | Speed Setpoint 4     |
| 47             | 2F   |     | 23          |       | xxxxx  |                      |        |                      |
|                |      | 082 | 0           |       |        |                      | R/O    | Drive Start          |
|                |      | 084 | 1           |       |        |                      | R/O    | Drive Enable         |
|                |      | 122 | 2           |       |        |                      | R/O    | Health Flag          |
|                |      | 125 | 3           |       |        |                      | R/O    | Ready                |
|                |      |     | 4 - 7       |       |        |                      |        | Reserved             |
|                |      | 079 | 8           |       |        |                      | R/O    | At Standstill        |
|                |      | 112 | 9           |       |        |                      | R/O    | Stall Trip Warning   |
|                |      |     | 10 - 15     |       |        |                      |        | Reserved             |

| Block 6 (590+) |      |     |             |       |        |                      |        |                           |
|----------------|------|-----|-------------|-------|--------|----------------------|--------|---------------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS<br>MIN TO MAX | ACCESS | DESCRIPTION               |
|                |      |     | BINARY      | ASCII | BINARY |                      |        |                           |
| 48             | 30   | 027 | 21          |       | xxx.x  | 0.1/600.0            | R/W    | Stop time                 |
| 49             | 31   | 026 | 21          |       | xxx.x  | 0.1/600.0            | R/W    | P-Stop time               |
| 50             | 32   | 091 | 21          |       | xxx.xx | 0/200.00             | R/W    | P-Stop Current Limit      |
| 51             | 33   | 029 | 21          |       | xxx.xx | 0/100.00             | R/W    | Stop Zero Speed Threshold |
| 52             | 34   | 005 | 21          |       | xxx.xx | -100.00/100.00       | R/W    | Ramp Input                |
| 53             | 35   | 100 | 21          |       | xxx.xx | -200.00/200.00       | R/O    | Setpoint Sum Input 1      |
| 54             | 36   | 309 | 21          |       | xxx.xx | -200.00/200.00       | R/W    | Setpoint Sum Input 0      |
| 55             | 37   |     | 23          |       | xxxxx  |                      |        |                           |
|                |      | 94  | 0           |       |        | 0/1                  | R/W    | Aux. Digital Output 1     |
|                |      | 95  | 1           |       |        | 0/1                  | R/W    | Aux. Digital Output 2     |
|                |      | 96  | 2           |       |        | 0/1                  | R/W    | Aux. Digital Output 3     |
|                |      |     | 3 - 7       |       |        |                      |        | Reserved                  |
|                |      | 292 | 8           |       |        | 0/1                  | R/W    | Sign 0                    |
|                |      | 8   | 9           |       |        | 0/1                  | R/W    | Sign 1                    |
|                |      | 9   | 10          |       |        | 0/1                  | R/W    | Sign 2                    |
|                |      |     | 11 - 15     |       |        |                      |        | Reserved                  |

| Block 7 (590+) |      |     |             |       |        |                |        |                           |
|----------------|------|-----|-------------|-------|--------|----------------|--------|---------------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS         | ACCESS | DESCRIPTION               |
|                |      |     | BINARY      | ASCII | BINARY |                |        |                           |
| 56             | 38   | 055 |             | 21    | xxx.xx |                | R/O    | Analogue Output 1         |
| 57             | 39   | 056 |             | 21    | xxx.xx |                | R/O    | Analogue Output 2         |
| 58             | 3A   | 128 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Aux. Analogue Output 1    |
| 59             | 3B   | 129 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Aux. Analogue Output 2    |
| 60             | 3C   | 266 |             | 21    | xxx.xx | 0/100.00       | R/W    | % S-Ramp                  |
| 61             | 3D   | 264 |             | 21    | xxx.xx |                | R/O    | Raise / Lower Output      |
| 62             | 3E   | 255 |             | 21    | xxx.xx | -300.00/300.00 | R/W    | Raise / Lower Reset Value |
| 63             | 3F   | -   |             | 23    | xxxxx  |                |        |                           |
| -              |      | 261 | 0           |       |        | 0 1            | R/W    | Raise / Lower Raise Input |
| -              |      | 262 | 1           |       |        | 0 1            | R/W    | Raise/Lower Lower Input   |
| -              |      | 307 | 2           |       |        | 0 1            | R/W    | Raise / Lower Reset       |

| Block 8 (590+) |      |     |             |       |        |                |        |               |
|----------------|------|-----|-------------|-------|--------|----------------|--------|---------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS         | ACCESS | DESCRIPTION   |
|                |      |     | BINARY      | ASCII | BINARY |                |        |               |
| 64             | 40   | 218 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Jog Speed 1   |
| 65             | 41   | 219 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Jog Speed 2   |
| 66             | 42   | 253 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Take Up 1     |
| 67             | 43   | 254 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Take Up 2     |
| 68             | 44   | 225 |             | 21    | xxx.xx | -100.00/100.00 | R/W    | Crawl Speed   |
| 71             | 47   | -   |             | 23    | xxxxx  |                |        |               |
| -              |      | 228 | 0           |       |        | 0 1            | R/W    | Jog Mode      |
| -              |      | 227 | 1           |       |        | 0 1            | R/W    | Auxiliary Jog |

| Block 9 (590+) |      |     |             |       |        |                 |        |                           |
|----------------|------|-----|-------------|-------|--------|-----------------|--------|---------------------------|
| PNO (ID)       | (MN) | TAG | DATA FORMAT |       |        | LIMITS          | ACCESS | DESCRIPTION               |
|                |      |     | BINARY      | ASCII | BINARY |                 |        |                           |
| 72             | 48   | 208 |             | 21    | x.xxxx | -3.0000/+3.0000 | R/W    | Ratio 0                   |
| 73             | 49   | 309 |             | 21    | xxx.xx | -100.00/+100.00 | R/W    | Input 0                   |
| 74             | 4A   | 48  |             | 21    | xxx.xx | -100.00/+100.00 | R/W    | Pre-set -ve Current Limit |
| 75             | 4B   | 301 |             | 21    | xxx.xx | -100.00/+100.00 | R/W    | Pre-set +ve Current Limit |

| Block 10 (590+) |      |     |             |       |        |                  |        |                                 |
|-----------------|------|-----|-------------|-------|--------|------------------|--------|---------------------------------|
| PNO (ID)        | (MN) | TAG | DATA FORMAT |       |        | LIMITS           | ACCESS | DESCRIPTION                     |
|                 |      |     | BINARY      | ASCII | BINARY |                  |        |                                 |
| 80              | 50   | 103 |             | 21    | xxx.xx | -300.00 /+300.00 | R/W    | Value for TRUE Digital Input 1  |
| 81              | 51   | 104 |             | 21    | xxx.xx | -300.00 /+300.00 | R/W    | Value for FALSE Digital Input 1 |
| 82              | 52   | 106 |             | 21    | xxx.xx | -300.00 /+300.00 | R/W    | Value for TRUE Digital Input 2  |
| 83              | 53   | 107 |             | 21    | xxx.xx | -300.00 /+300.00 | R/W    | Value for FALSE Digital Input 2 |
| 84              | 54   | 109 |             | 21    | xxx.xx | -300.00 /+300.00 | R/W    | Value for TRUE Digital Input 3  |
| 85              | 55   | 110 |             | 21    | xxx.xx | -300.00/+300.00  | R/W    | Value for FALSE Digital Input 3 |

| Block 11 (590+) |      |     |             |        |        |                 |        |             |
|-----------------|------|-----|-------------|--------|--------|-----------------|--------|-------------|
| PNO (ID)        | (MN) | TAG | DATA FORMAT |        |        | LIMITS          | ACCESS | DESCRIPTION |
|                 |      |     | BINARY      | ASCII  | BINARY |                 |        |             |
| 88              | 58   | 339 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 1     |
| 89              | 59   | 340 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 2     |
| 90              | 5A   | 341 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 3     |
| 91              | 5B   | 342 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 4     |
| 92              | 5C   | 343 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 5     |
| 93              | 5D   | 344 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 6     |
| 94              | 5E   | 345 | 21          | xxx.xx |        | -300.00/+300.00 | R/W    | Value 7     |
| 95              | 5F   | -   | 23          | xxxxx  |        |                 |        |             |
| -               |      | 346 | 0           |        |        | 0 1             | R/W    | Logic 1     |
| -               |      | 347 | 1           |        |        | 0 1             | R/W    | Logic 2     |
| -               |      | 348 | 2           |        |        | 0 1             | R/W    | Logic 3     |
| -               |      | 349 | 3           |        |        | 0 1             | R/W    | Logic 4     |
| -               |      | 350 | 4           |        |        | 0 1             | R/W    | Logic 5     |
| -               |      | 351 | 5           |        |        | 0 1             | R/W    | Logic 6     |
| -               |      | 352 | 6           |        |        | 0 1             | R/W    | Logic 7     |
| -               |      | 353 | 7           |        |        | 0 1             | R/W    | Logic 8     |

| Block 12 (590+) |      |     |             |       |        |        |        |                     |
|-----------------|------|-----|-------------|-------|--------|--------|--------|---------------------|
| PNO (ID)        | (MN) | TAG | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION         |
|                 |      |     | BINARY      | ASCII | BINARY |        |        |                     |
| 96              | 60   | 312 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 112 |
| 97              | 61   | 313 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 113 |
| 98              | 62   | 314 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 114 |
| 99              | 63   | 315 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 115 |
| 100             | 64   | 316 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 116 |
| 101             | 65   | 317 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 117 |
| 102             | 66   | 318 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 118 |
| 103             | 67   | 319 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 119 |

| Block 13 (590+) |      |     |             |       |        |        |        |                     |
|-----------------|------|-----|-------------|-------|--------|--------|--------|---------------------|
| PNO (ID)        | (MN) | TAG | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION         |
|                 |      |     | BINARY      | ASCII | BINARY |        |        |                     |
| 104             | 68   | 320 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 120 |
| 105             | 69   | 321 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 121 |
| 106             | 6A   | 322 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 122 |
| 107             | 6B   | 323 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 123 |
| 108             | 6C   | 324 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 124 |
| 109             | 6D   | 325 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 125 |
| 110             | 6E   | 326 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 126 |
| 111             | 6F   | 327 | 21          | xxxxx |        |        | R/W    | Pointer for PNO 127 |

| Block 14 (590+) |      |         |             |       |        |        |        |                    |
|-----------------|------|---------|-------------|-------|--------|--------|--------|--------------------|
| PNO (ID)        | (MN) | TAG     | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION        |
|                 |      |         | BINARY      | ASCII | BINARY |        |        |                    |
| 112             | 70   | PNO 96  | *           | *     | *      | *      |        | Configurable PNO 0 |
| 113             | 71   | PNO 97  | *           | *     | *      | *      |        | Configurable PNO 1 |
| 114             | 72   | PNO 98  | *           | *     | *      | *      |        | Configurable PNO 2 |
| 115             | 73   | PNO 99  | *           | *     | *      | *      |        | Configurable PNO 3 |
| 116             | 74   | PNO 100 | *           | *     | *      | *      |        | Configurable PNO 4 |
| 117             | 75   | PNO 101 | *           | *     | *      | *      |        | Configurable PNO 5 |
| 118             | 76   | PNO 102 | *           | *     | *      | *      |        | Configurable PNO 6 |
| 119             | 77   | PNO 103 | *           | *     | *      | *      |        | Configurable PNO 7 |

| Block 15 (590+) |      |         |             |       |        |        |        |                     |
|-----------------|------|---------|-------------|-------|--------|--------|--------|---------------------|
| PNO (ID)        | (MN) | TAG     | DATA FORMAT |       |        | LIMITS | ACCESS | DESCRIPTION         |
|                 |      |         | BINARY      | ASCII | BINARY |        |        |                     |
| 120             | 78   | PNO 104 | *           | *     | *      | *      |        | Configurable PNO 8  |
| 121             | 79   | PNO 105 | *           | *     | *      | *      |        | Configurable PNO 9  |
| 122             | 7A   | PNO 106 | *           | *     | *      | *      |        | Configurable PNO 10 |
| 123             | 7B   | PNO 107 | *           | *     | *      | *      |        | Configurable PNO 11 |
| 124             | 7C   | PNO 108 | *           | *     | *      | *      |        | Configurable PNO 12 |
| 125             | 7D   | PNO 109 | *           | *     | *      | *      |        | Configurable PNO 13 |
| 126             | 7E   | PNO 110 | *           | *     | *      | *      |        | Configurable PNO 14 |
| 127             | 7F   | PNO 111 | *           | *     | *      | *      |        | Configurable PNO 15 |

\* = These fields depend upon the destination TAG number

| <b>Block 0 (605, 690+)</b> |     |                     |                          |
|----------------------------|-----|---------------------|--------------------------|
| PNO                        | TAG | DESCRIPTION         | EQUIVALENT ASCII COMMAND |
| 0                          |     | instrument identity | (II)                     |
| 1                          |     | error               | (EE)                     |
| 2                          |     | main version        | (V0)                     |
| 3                          |     | comms version       | (V2)                     |
| 4                          |     | system command      | (!1)                     |
| 5                          |     | system state        | (!2)                     |
| 6                          |     | save command        | (!3)                     |
| 7                          |     | save state          | (!4)                     |

| <b>Block 1 (605, 690+)</b> |     |                        |             |
|----------------------------|-----|------------------------|-------------|
| PNO                        | TAG | DESCRIPTION            | DATA FORMAT |
| 8                          | 066 | motor current          | (xxx.xx%)   |
| 9                          | 072 | load (605)             | (xxx.xx%)   |
| 9                          | 070 | torque feedback (690+) | (xxx.xx%)   |
| 10                         | 073 | field                  | (xxx.xx%)   |
| 11                         | 370 | current limiting       | (bool)      |
| 12                         | 255 | speed demand           | (xxx.xx%)   |
| 13                         | 591 | drive frequency        | (xxx.xHz)   |
| 14                         | 006 | first trip             | (enum)      |
| 15                         | 272 | comms status           | (word)      |

| <b>Block 2 (605, 690+)</b> |     |                    |              |
|----------------------------|-----|--------------------|--------------|
| PNO                        | TAG | DESCRIPTION        | DATA FORMAT  |
| 16                         | 568 | encoder speed Hz   | (xxx.xHz)    |
| 17                         | 569 | encoder speed RPM  | (xxxxxn/min) |
| 18                         | 749 | encoder speed %    | (xxx.xx%)    |
| 19                         | 748 | encoder position   | (xxxx)       |
| 20                         | 360 | at zero speed      | (bool)       |
| 21                         | 004 | active trips       | (word)       |
| 22                         | 005 | trips warning      | (word)       |
| 23                         | 598 | multiplexer output | (word)       |

| <b>Block 3 (605, 690+)</b> |      |                              |             |
|----------------------------|------|------------------------------|-------------|
| PNO                        | TAG  | DESCRIPTION                  | DATA FORMAT |
| 24                         | 365  | motor limit                  | (xxx.xx%)   |
| 25                         | 623  | regen limit (605)            | (xxx.xx%)   |
| 25                         | 1208 | positive torque limit (690+) | (xxx.xx%)   |
| 26                         | 258  | ramp up time                 | (xxx.xs)    |
| 27                         | 259  | ramp down time               | (xxx.xs)    |
| 28                         | 057  | max speed (605)              | (xxx.xHz)   |
| 28                         | 1032 | max speed (690+)             | (xxxxxRPM)  |
| 29                         | 337  | min speed                    | (xxx.xx%)   |
| 30                         | 104  | V/F shape                    | (enum)      |
| 31                         | 106  | base frequency               | (xxx.xHz)   |



| <b>Block 4 (605, 690+)</b> |      |                              |             |
|----------------------------|------|------------------------------|-------------|
| PNO                        | TAG  | DESCRIPTION                  | DATA FORMAT |
| 32                         | 107  | fixed boost                  | (xx.xx%)    |
| 33                         | 108  | auto boost                   | (xx.xx%)    |
| 34                         | 064  | full load calib              | (xxxx.xA)   |
| 35                         | 065  | no load calib                | (xxxx.xA)   |
| 36                         | 242  | power factor                 | (x.xx)      |
| 37                         | 237  | l*t threshold (605)          | (xxx.xx%)   |
| 37                         | 1148 | aiming point (690+)          | (xxx.xx%)   |
| 38                         | 239  | l*t upper limit (605)        | (xxx.xx%)   |
| 38                         | 1209 | negative torque limit (690+) | (xxx.xx%)   |
| 39                         | 238  | l*t time (605)               | (xx)        |
| 39                         | 1149 | inverse time delay (690+)    | (xx.xs)     |

| <b>Block 5 (605, 690+)</b> |     |                  |             |
|----------------------------|-----|------------------|-------------|
| PNO                        | TAG | DESCRIPTION      | DATA FORMAT |
| 40                         | 347 | preset 1 input 0 | (xxx.xx%)   |
| 41                         | 348 | preset 1 input 1 | (xxx.xx%)   |
| 42                         | 349 | preset 1 input 2 | (xxx.xx%)   |
| 43                         | 350 | preset 1 input 3 | (xxx.xx%)   |
| 44                         | 351 | preset 1 input 4 | (xxx.xx%)   |
| 45                         | 352 | preset 1 input 5 | (xxx.xx%)   |
| 46                         | 353 | preset 1 input 6 | (xxx.xx%)   |
| 47                         | 354 | preset 1 input 7 | (xxx.xx%)   |

| <b>Block 6 (605, 690+)</b> |     |                  |             |
|----------------------------|-----|------------------|-------------|
| PNO                        | TAG | DESCRIPTION      | DATA FORMAT |
| 48                         | 380 | preset 2 input 0 | (xxx.xx%)   |
| 49                         | 381 | preset 2 input 1 | (xxx.xx%)   |
| 50                         | 382 | preset 2 input 2 | (xxx.xx%)   |
| 51                         | 383 | preset 2 input 3 | (xxx.xx%)   |
| 52                         | 384 | preset 2 input 4 | (xxx.xx%)   |
| 53                         | 385 | preset 2 input 5 | (xxx.xx%)   |
| 54                         | 386 | preset 2 input 6 | (xxx.xx%)   |
| 55                         | 387 | preset 2 input 7 | (xxx.xx%)   |

| <b>Block 7 (605, 690+)</b> |     |                  |             |
|----------------------------|-----|------------------|-------------|
| PNO                        | TAG | DESCRIPTION      | DATA FORMAT |
| 56                         | 390 | preset 3 input 0 | (xxx.xx%)   |
| 57                         | 391 | preset 3 input 1 | (xxx.xx%)   |
| 58                         | 392 | preset 3 input 2 | (xxx.xx%)   |
| 59                         | 393 | preset 3 input 3 | (xxx.xx%)   |
| 60                         | 394 | preset 3 input 4 | (xxx.xx%)   |
| 61                         | 395 | preset 3 input 5 | (xxx.xx%)   |
| 62                         | 396 | preset 3 input 6 | (xxx.xx%)   |
| 63                         | 397 | preset 3 input 7 | (xxx.xx%)   |

| <b>Block 8 (605, 690+)</b> |     |                  |             |
|----------------------------|-----|------------------|-------------|
| PNO                        | TAG | DESCRIPTION      | DATA FORMAT |
| 64                         | 342 | skip frequency 1 | (xxx.xHz)   |
| 65                         | 343 | skip frequency 2 | (xxx.xHz)   |
| 66                         | 344 | skip frequency 3 | (xxx.xHz)   |
| 67                         | 345 | skip frequency 4 | (xxx.xHz)   |
| 68                         | 341 | skip band 1      | (xxx.xHz)   |
| 69                         | 680 | skip band 2      | (xxx.xHz)   |
| 70                         | 681 | skip band 3      | (xxx.xHz)   |
| 71                         | 682 | skip band 4      | (xxx.xHz)   |

| <b>Block 9 (605, 690+)</b> |     |                     |             |
|----------------------------|-----|---------------------|-------------|
| PNO                        | TAG | DESCRIPTION         | DATA FORMAT |
| 72                         | 271 | comms command       | (word)      |
| 73                         | 269 | comms setpoint      | (xxx.xx%)   |
| 74                         | 355 | preset 1 select     | (enum)      |
| 75                         | 388 | preset 2 select     | (enum)      |
| 76                         | 398 | preset 3 select     | (enum)      |
| 77                         | 279 | run stopping mode   | (enum)      |
| 78                         | 304 | fast stopping mode  | (enum)      |
| 79                         | 599 | demultiplexer input | (word)      |

| <b>Block 10 (605, 690+)</b> |     |                   |             |
|-----------------------------|-----|-------------------|-------------|
| PNO                         | TAG | DESCRIPTION       | DATA FORMAT |
| 80                          | 311 | pid enable        | (bool)      |
| 81                          | 313 | pid p gain        | (xxx.x)     |
| 82                          | 314 | pid integral tc   | (xx.xxs)    |
| 83                          | 315 | pid derivative tc | (xxx.xs)    |
| 84                          | 316 | pid filter tc     | (xxx.xs)    |
| 85                          | 317 | pid pos out limit | (xxx.xx)    |
| 86                          | 318 | pid neg out limit | (xxx.xx)    |
| 87                          | 319 | pid out scaling   | (x.xxxx%)   |

| <b>Block 11 (605, 690+)</b> |     |                      |             |
|-----------------------------|-----|----------------------|-------------|
| PNO                         | TAG | DESCRIPTION          | DATA FORMAT |
| 88                          | 130 | value func 1 input a | (xxx.xx%)   |
| 99                          | 131 | value func 1 input b | (xxx.xx%)   |
| 90                          | 132 | value func 1 input c | (xxx.xx%)   |
| 91                          | 133 | value func 1 output  | (xxx.xx%)   |
| 92                          | 135 | value func 2 input a | (xxx.xx%)   |
| 93                          | 136 | value func 2 input b | (xxx.xx%)   |
| 94                          | 137 | value func 2 input c | (xxx.xx%)   |
| 95                          | 138 | value func 2 output  | (xxx.xx%)   |

| <b>Block 12 (605, 690+)</b> |     |                  |                       |
|-----------------------------|-----|------------------|-----------------------|
| PNO                         | TAG | DESCRIPTION      | DATA FORMAT           |
| 96                          | 543 | preset 7 input 0 | (pointer for PNO 112) |
| 97                          | 544 | preset 7 input 1 | (pointer for PNO 113) |
| 98                          | 545 | preset 7 input 2 | (pointer for PNO 114) |
| 99                          | 546 | preset 7 input 3 | (pointer for PNO 115) |
| 100                         | 547 | preset 7 input 4 | (pointer for PNO 116) |
| 101                         | 548 | preset 7 input 5 | (pointer for PNO 117) |
| 102                         | 549 | preset 7 input 6 | (pointer for PNO 118) |
| 103                         | 550 | preset 7 input 7 | (pointer for PNO 119) |

| <b>Block 13 (605, 690+)</b> |     |                  |                       |
|-----------------------------|-----|------------------|-----------------------|
| PNO                         | TAG | DESCRIPTION      | DATA FORMAT           |
| 104                         | 554 | preset 8 input 0 | (pointer for PNO 120) |
| 105                         | 555 | preset 8 input 1 | (pointer for PNO 121) |
| 106                         | 556 | preset 8 input 2 | (pointer for PNO 122) |
| 107                         | 557 | preset 8 input 3 | (pointer for PNO 123) |
| 108                         | 558 | preset 8 input 4 | (pointer for PNO 124) |
| 109                         | 559 | preset 8 input 5 | (pointer for PNO 125) |
| 110                         | 560 | preset 8 input 6 | (pointer for PNO 126) |
| 111                         | 561 | preset 8 input 7 | (pointer for PNO 127) |

| <b>Block 14 (605, 690+)</b> |     |                             |             |
|-----------------------------|-----|-----------------------------|-------------|
| PNO                         | TAG | DESCRIPTION                 | DATA FORMAT |
| 112                         |     | indirect access parameter 1 |             |
| 113                         |     | indirect access parameter 2 |             |
| 114                         |     | indirect access parameter 3 |             |
| 115                         |     | indirect access parameter 4 |             |
| 116                         |     | indirect access parameter 5 |             |
| 117                         |     | indirect access parameter 6 |             |
| 118                         |     | indirect access parameter 7 |             |
| 119                         |     | indirect access parameter 8 |             |

| <b>Block 15 (605, 690+)</b> |     |                              |             |
|-----------------------------|-----|------------------------------|-------------|
| PNO                         | TAG | DESCRIPTION                  | DATA FORMAT |
| 120                         |     | indirect access parameter 9  |             |
| 121                         |     | indirect access parameter 10 |             |
| 122                         |     | indirect access parameter 11 |             |
| 123                         |     | indirect access parameter 12 |             |
| 124                         |     | indirect access parameter 13 |             |
| 125                         |     | indirect access parameter 14 |             |
| 126                         |     | indirect access parameter 15 |             |
| 127                         |     | indirect access parameter 16 |             |

# Initial Set-up for MODBUS RTU



## Configuring the Drive

Begin by configuring the drive to accept the Technology Option. Use the keypad (MMI), or ConfigEd Lite to configure the TEC OPTION function block parameters inside the drive before commissioning the RS485 technology option.

The parameter names and functions in this function block are inter-dependent and will change with different parameter values and various Options that can be fitted.

Fit the RS485 option to the drive:

- For the 605 and 690+ drives, navigate to the VIEW LEVEL parameter and select ADVANCED. This allows you to view the TEC OPTION menu.

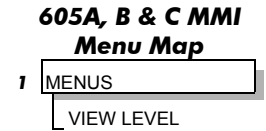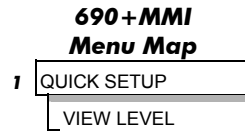

- Navigate to the TEC OPTION menu and:
  - Select RS485 in the TYPE parameter
  - Select MODBUS RTU in the PROTOCOL parameter
  - Select the Baud Rate
  - Select Parity
  - Enter the Device Address
  - Check the FAULT parameter for error messages and rectify if necessary

**Note:** When using the MMI, remember to save the set-up via the Parameter Save or Config Save menu.

When setting values for parameters from ConfigEd Lite (or other suitable PC programming tool) you are able to select any value in the parameter's range, i.e. -32768 to 32767. If the value is incorrect, i.e. it doesn't correspond to a value that can be set using the MMI, then the FAULT output parameter will be set to PARAMETER.


**Note:** ConfigEd Lite is Parker SSD Drives' Windows-based block programming software.

## The Modbus RTU MMI View

With the RS485 option correctly installed, the TEC OPTION function block will contain the following parameter names when viewed using the MMI.

| Tec Option |                         |
|------------|-------------------------|
|            | FAULT [756] NONE        |
|            | VERSION [757] 0000      |
|            | ERROR REPORT [758] 00C0 |
|            | ERROR COUNT [759] 0     |
| RS485      | [750] TYPE              |
| MODBUS RTU | [751] PROTOCOL          |
| 9600       | [752] BAUD RATE         |
| NONE       | [753] PARITY            |
| 0          | [754] ADDRESS           |
| FALSE      | [755] ERROR RESET       |

**Modbus RTU ConfigEdLite view**


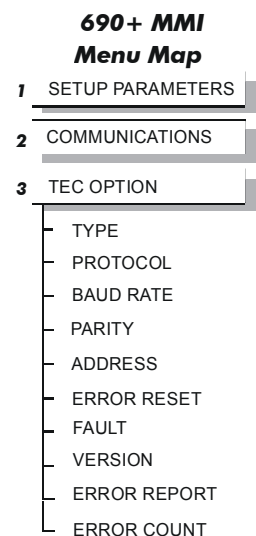


*SERIAL LINKS is at Menu Level 1 for the 590+ and 590+DRV and contains the TEC OPTION menu.*

### The Non-specific ConfigEd-Lite & MMI View

This is how the TEC OPTION function block looks when viewed using ConfigEd-Lite.

The MMI also displays these non-specific parameter names when the RS485 option is not yet installed into the drive, or an incorrect TYPE is selected for the fitted Option.

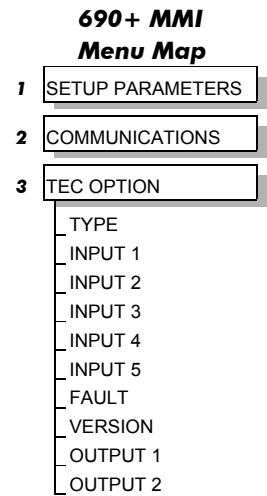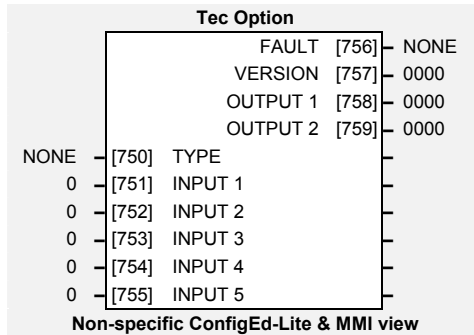

### MMI Parameter Descriptions for Modbus RTU

#### TYPE

*Range: Enumerated - see below*

Selects the type of Technology Option. The TYPE parameter is automatically set when defaults are loaded if a Technology Option is present.

*Enumerated Value : Technology Option*

- 0 : NONE
- 1 : **RS485**
- 2 : PROFIBUS DP
- 3 : LINK
- 4 : DEVICENET
- 5 : CANOPEN
- 6 : LONWORKS
- 7 : CONTROLNET
- 8 : MODBUS PLUS
- 9 : ETHERNET

#### PROTOCOL

*Range: Enumerated - see below*

Selects the protocol to be used.

*Enumerated Value : Protocol*

- 0 : EI ASCII (default)
- 1 : EI BINARY
- 2 : **MODBUS RTU**

#### BAUD RATE

*Range: Enumerated - see below*

Selects the Baud Rate.

*Enumerated Value : Baud Rate*

- 0 : 300
- 1 : 600
- 2 : 1200
- 3 : 2400
- 4 : 4800
- 5 : 9600 (default)
- 6 : 19200
- 7 : 38400
- 8 : 57600
- 9 : 115200

**PARITY**

Selects the parity.

*Range: Enumerated - see below*

- 0 : NONE
- 1 : ODD
- 2 : EVEN

**ADDRESS**

The Modbus device address.

*Range: 0 to 247*

**ERROR RESET**

When TRUE, clears the ERROR CODE parameter (setting it to 00C0) and sets the ERROR COUNT parameter to zero.

*Range: FALSE/TRUE*

**FAULT**

The fault state of the Technology Option.

*Range: Enumerated - see below*

- |                   |                                 |
|-------------------|---------------------------------|
| 0 : NONE          | no faults                       |
| 1 : PARAMETER     | parameter out-of-range          |
| 2 : TYPE MISMATCH | TYPE parameter not set to RS485 |
| 3 : SELF TEST     | hardware fault - internal       |
| 4 : HARDWARE      | hardware fault - external       |
| 5 : MISSING       | no option fitted                |

Also refer to “Module LED”, page 8.

**VERSION**

The version of the Technology Option card. If no option is fitted then the version is reset to zero.

*Range: 0x0000 to 0xFFFF*

**ERROR REPORT**

Displays the last error as a hexadecimal code. Refer to “Error Response”, page 61 for a list of codes.

*Range: 0x0000 to 0xFFFF*

**ERROR COUNT**

Increments each time an error is detected.

*Range: 0 to 9999*

Note: will stop counting at 9999 (see ERROR RESET).


## Configuring the PLC/SCADA Supervisor

By referring to the Parameter Specification Table in the main Product Manual, you can enter the parameter information you require.

It provides the information in the following way:

**Tag**

The Modbus register number is the same as the Tag. For example, RAMP INPUT is accessed using 0005 register number.

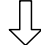

| Tag | Name            | MMI Menu                                | CE Block       | Range                        | ID | Notes |
|-----|-----------------|---|----------------|------------------------------|----|-------|
| 1   | NONVOL VERSION  | <i>Not on MMI</i>                       |                | 0x0000 to 0xFFFF             | a1 |       |
| 2   | RAMP ACCEL TIME | SETUP PARAMETERS::RAMPS                 | Ramps          | 0.1 to 600.0 SECS            | a2 |       |
| 3   | RAMP DECEL TIME | SETUP PARAMETERS::RAMPS                 | Ramps          | 0.1 to 600.0 SECS            | a3 |       |
| 4   | CONSTANT ACCEL  | SETUP PARAMETERS::RAMPS                 | Ramps          | 0 : DISABLED<br>1 : ENABLED  | a4 | 4     |
| 5   | RAMP INPUT      | SETUP PARAMETERS::RAMPS                 | Ramps          | -105.00 to 105.00 %          | a5 |       |
| 6   | RATIO 1         | SETUP PARAMETERS::SETPOINT SUM 1        | Setpoint Sum 1 | -3.0000 to 3.0000            | a6 |       |
| 7   | RATIO 2 (A3)    | SETUP PARAMETERS::SPEED LOOP::SETPOINTS | Speed Loop     | -3.0000 to 3.0000            | a7 |       |
| 8   | SIGN 1          | SETUP PARAMETERS::SETPOINT SUM 1        | Setpoint Sum 1 | 0 : NEGATIVE<br>1 : POSITIVE | a8 |       |
|     | SIGN 2 (A3)     | SETUP PARAMETERS::SPEED LOOP::SETPOINTS | Speed Loop     | 0 : NEGATIVE<br>1 : POSITIVE |    |       |

*Example only*

## MODBUS RTU Communications

A MODBUS RTU communication network can have only one Master, and one or more Slave devices.

- Each Slave has a unique “device address”
- The device address “0” is a special case and is used for messages that are broadcast to all Slaves. This is restricted to parameter write operations.
- The unit supports a subset of MODBUS RTU function codes.
- The data includes parameters referenced by a “parameter address”.
- Sending a communication with a unique device address causes only the device with that address to respond. That device will check for errors, perform the requested task and then reply with its own address, data and check sum.
- Sending a communication with the device address “0” is a broadcast communication that sends information to all devices on the network. Each device performs the required action but does not transmit a reply.

### How is the Information Transferred?

A typical transaction consists of a request sent from the Master followed by a response from the Slave.

A message consists of a sequence of characters which we identify as:

- Device Address
- Function Code
- Data
- Error Check Data
- End of Transmission

### Device Address

Each Slave has a unique 8-bit device address. The Gould MODBUS Protocol defines the address range limits as 1 to 247 (device address 0 is the broadcast message to all slaves simultaneously).

### Parameter Address

Data bits or data words exchange information between Master and Slave devices. This data consists of parameters. All parameters communicated between Master and Slaves have a 16-bit parameter address.

The MODBUS parameter address range is 0001 to FFFF.

## RTU Mode of Transmission

The MODBUS RTU definition of the mode of transmission for a single character is:

*A start bit, eight data bits, a parity bit, one or two stop bits*

All Parker SSD Drives' units use one stop bit.

Parity may be configured to be NONE, ODD or EVEN (if NONE, no parity bit is transmitted)

The RTU mode of transmission for a single character is represented as follows:

|       |    |    |    |    |    |    |    |    |        |      |
|-------|----|----|----|----|----|----|----|----|--------|------|
| Start | d7 | d6 | d5 | d4 | d3 | d2 | d1 | d0 | Parity | Stop |
|-------|----|----|----|----|----|----|----|----|--------|------|

## Message Frame Format

A message frame format consists of a number of correctly sequenced characters, as shown below.

| Frame Start | Device Address | Function Code | Data    | CRC     | EOT     |
|-------------|----------------|---------------|---------|---------|---------|
| 3 bytes     | 1 byte         | 1 byte        | n bytes | 2 bytes | 3 bytes |

### Frame Start

The frame start is a period of inactivity at least 3.5 times the single character transmission time. For example, at 9600 baud a character with a 1 start, 1 stop and 8 data bits will require 3.5ms frame start. This period is the implied EOT of a previous transmission.

### Device Address

The device address is a single byte (8-bits), unique to each device on the network.

### Function Code

Function codes are a single byte instruction to the Slave describing the action to perform.

### Data

The Data segment of a message will depend on the function code and the number of bytes will vary accordingly. Typically, the data segment will contain a parameter address and the number of parameters to read or write.

### CRC

The CRC (Cyclic Redundancy Check) is an error code and is 2 bytes (16-bits) long.

### EOT

The EOT (End Of Transmission) segment is a period of inactivity 3.5 times the single character transmission time. The EOT segment at the end of a message indicates to the listening device that the next transmission will be a new message and therefore a device address character.

## Cyclic Redundancy Check

This is an error check code and is 2 bytes (16-bits) long. After constructing a message (data only - no start, stop or parity bits), the transmitting device calculates a CRC code and appends this to the end of the message. The receiving device also calculates a CRC code from the received message. If this CRC code is not the same as the transmitted CRC there has been a communication error. Units do not reply if they detect a CRC error in messages sent to them.


The CRC code is formed by the following steps:

1. Load a 16-bit CRC register with FFFFh.
2. Exclusive OR ( $\oplus$ ) the first 8-bit byte of the message with the high order byte of the CRC register. Return the result to the CRC register.
3. Shift the CRC register one bit to the right.
4. If the overflow bit (or flag) is 1, exclusive OR the CRC register with A001 hex and return the result to the CRC register.
5. Repeat steps 3 & 4 seven times (8 in total).



6. Exclusive OR the next 8-bit byte of the message with the high order byte of the CRC register.
7. Repeat step 3 through 6 until all bytes of the message have been exclusive OR'd with the CRC register and shifted 8 times.
8. The contents of the CRC register are the 2 byte CRC error code and are added to the message with the most significant bits first.

The flow chart below illustrates this CRC error check algorithm.

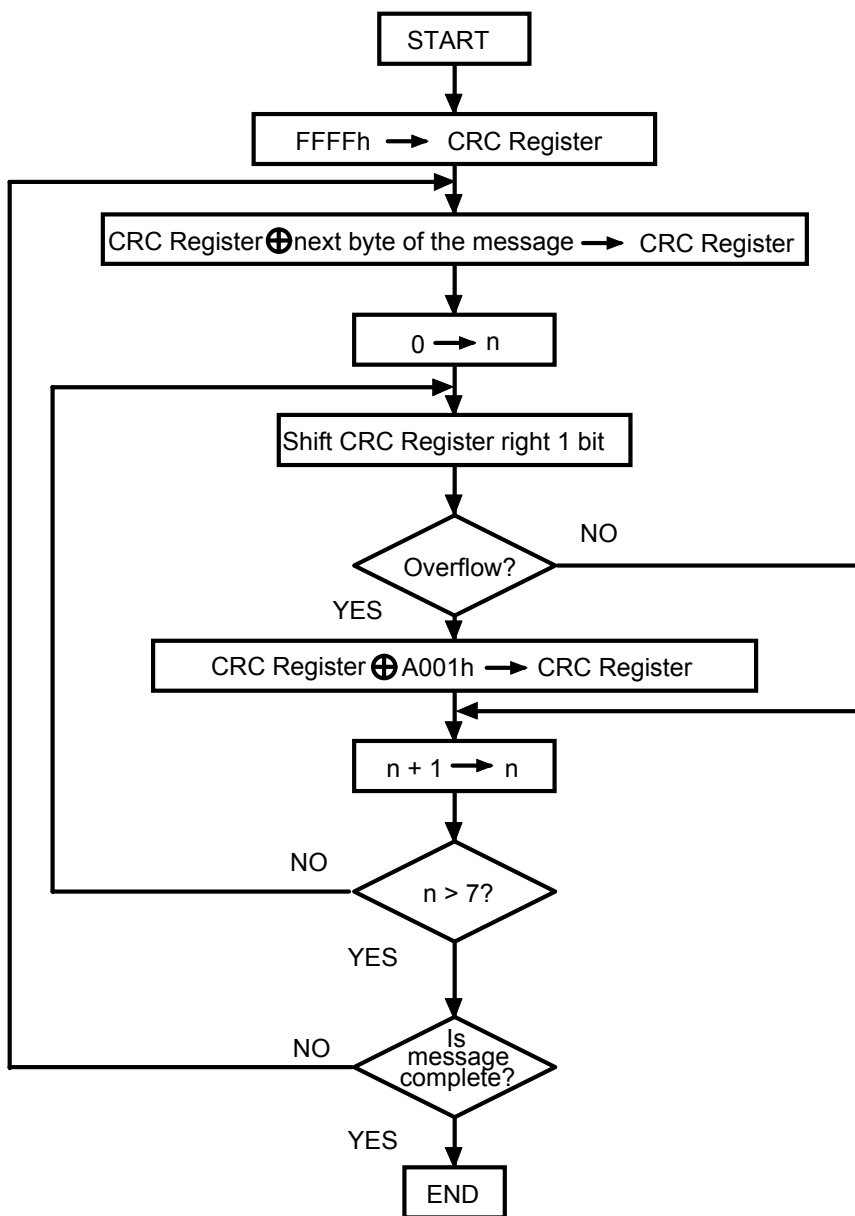

**Example of a CRC Calculation**

This example is a request to read from the Slave unit at address 02, the fast read of the status (07).

| Function                       | 16 Bit Register |      |            |      | Carry Flag |
|--------------------------------|-----------------|------|------------|------|------------|
|                                | LSB             |      | MSB        |      |            |
| Load register with FFFF hex    | 1111            | 1111 | 1111       | 1111 | 0          |
| First byte of the message (02) |                 |      | 0000       | 0010 |            |
| Exclusive OR                   | 1111            | 1111 | 1111       | 1101 |            |
| 1st shift right                | 0111            | 1111 | 1111       | 1110 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1101            | 1111 | 1111       | 1111 |            |
| 2nd shift right                | 0110            | 1111 | 1111       | 1111 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1100            | 1111 | 1111       | 1110 |            |
| 3rd shift right                | 0110            | 0111 | 1111       | 1111 | 0          |
| 4th shift right (carry = 0)    | 0011            | 0011 | 1111       | 1111 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1001            | 0011 | 1111       | 1110 |            |
| 5th shift right                | 0100            | 1001 | 1111       | 1111 | 0          |
| 6th shift right (carry = 0)    | 0010            | 0100 | 1111       | 1111 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1000            | 0100 | 1111       | 1110 |            |
| 7th shift right                | 0100            | 0010 | 0111       | 1111 | 0          |
| 8th shift right (carry = 0)    | 0010            | 0001 | 0011       | 1111 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1000            | 0001 | 0011       | 1110 |            |
| Next byte of the message (07)  |                 |      | 0000       | 0111 |            |
| Exclusive OR (shift = 8)       | 1000            | 0001 | 0011       | 1001 |            |
| 1st shift right                | 0100            | 0000 | 1001       | 1100 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1110            | 0000 | 1001       | 1101 |            |
| 2nd shift right                | 0111            | 0000 | 0100       | 1110 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1101            | 0000 | 0100       | 1111 |            |
| 3rd shift right                | 0110            | 1000 | 0010       | 0111 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1100            | 1000 | 0010       | 0110 |            |
| 4th shift right                | 0110            | 0100 | 0001       | 0011 | 0          |
| 5th shift right (carry = 0)    | 0011            | 0010 | 0000       | 1001 | 1          |
| A001                           | 1010            | 0000 | 0000       | 0001 |            |
| Exclusive OR (carry = 1)       | 1001            | 0010 | 0000       | 1000 |            |
| 6th shift right                | 0100            | 1001 | 0000       | 0100 | 0          |
| 7th shift right (carry = 0)    | 0010            | 0100 | 1000       | 0010 | 0          |
| 8th shift right (carry = 0)    | 0001            | 0010 | 0100       | 0001 | 0          |
| <b>CRC error check code</b>    | <b>12h</b>      |      | <b>41h</b> |      |            |

The final message transmitted including the CRC code is:

| Device Address |      | Function Code |      | CRC MSB |      | CRC LSB |      |
|----------------|------|---------------|------|---------|------|---------|------|
| 02h            |      | 07h           |      | 41h     |      | 12h     |      |
| 0000           | 0010 | 0000          | 0111 | 0100    | 0001 | 0001    | 0010 |

↑ First bit

Transmission order

Last bit ↑

### Example of a CRC Calculation in the "C" Language

This routine assumes that the data types "uint16" and "uint8" exist. These are unsigned 16 bit integer (usually an "unsigned short int" for most compiler types) and unsigned 8 bit integer (unsigned char).

"z\_p" is a pointer to a Modbus message, and z\_message\_length is its length, excluding the CRC.

Note that the Modbus message will probably contain "NULL" characters and so normal C string handling techniques will not work.

```
uint16 calculate_crc (uint8 *z_p, uint16 z_message_length)
/* CRC runs cyclic Redundancy Check Algorithm on input z_p */
/* Returns value of 16 bit CRC after completion and          */
/* always adds 2 crc bytes to message                        */
/* returns 0 if incoming message has correct CRC            */
{
    uint16 CRC = 0xffff;
    uint16 next;
    uint16 carry;
    uint16 n;
    uint8 crch, crcl;

    while (z_message_length--) {
        next = (uint16)*z_p;
        CRC ^= next;
        for (n = 0; n < 8; n++) {
            carry = CRC & 1;
            CRC >>= 1;
            if (carry) {
                CRC ^= 0xa001;
            }
        }
        z_p++;
    }
    crch = CRC / 256;
    crcl = CRC % 256;
    *z_p++ = crcl;
    *z_p = crch;
    return CRC;
}
```

### Example of a CRC Calculation in Basic Language

```
Function CRC (message$) as long
`` CRC runs Cyclic Redundancy Check Algorithm on input message$
`` Returns value of 16 bit CRC after completion and
`` always adds 2 crc bytes to message
`` returns 0 if incoming message has correct CRC

`` Must use double word for CRC and decimal constants

crc16& = 65535
FOR c% = 1 to LEN(message$)
    crc16& = crc16& XOR ASC(MID$(message$, c%, 1))
    FOR bit% = 1 to 8
        IF crc16& MOD 2 THEN
            crc16& = (crc16& \ 2) XOR 40961
        ELSE
            crc16& = crc16& \ 2
        END IF
    NEXT BIT%
NEXT c%
crch% = CRC16& \ 256: crcl% = CRC16& MOD 256
message$ = message$ + CHR$(crcl%) + CHR$(crch%)
CRC = CRC16&
END FUNCTION CRC
```

## Function Codes

Function codes are a single byte instruction to the Slave describing the action to perform.

The following communication functions are supported by Parker SSD Drives' units:

| Function Code | Function      |
|---------------|---------------|
| 01 or 02      | Read n bits   |
| 03 or 04      | Read n words  |
| 05            | Write 1 bit   |
| 06            | Write 1 word  |
| 08            | Loopback      |
| 15            | Write n bits  |
| 16            | Write n words |

### Read n Bits

Function Code: 01 or 02, (01h or 02h)

#### Command:

| Device Address | Function Code<br>01 or 02 | Address of<br>1st bit |     | Number of bits<br>to read |     | CRC |     |
|----------------|---------------------------|-----------------------|-----|---------------------------|-----|-----|-----|
| 1 byte         | 1 byte                    | MSB                   | LSB | MSB                       | LSB | MSB | LSB |

The maximum number of bits that may be read is 512.

#### Reply:

| Device<br>Address | Function Code<br>01 or 02 | Number<br>of bits to<br>read | First byte<br>of data | .... | Last byte<br>of data | CRC |     |
|-------------------|---------------------------|------------------------------|-----------------------|------|----------------------|-----|-----|
| 1 byte            | 1 byte                    | 1 byte                       | 1 byte                | .... | 1 byte               | MSB | LSB |

The first data byte contains the status of the first 8 bits, with the least significant bit being the first bit. The second data byte contains the status of the next 8 bits, etc. Unused bits are set to zero.

#### Example

From the unit at device address 02, read 14 parameters, beginning at Tag 640:

#### Command:

| Device Address | Function Code<br>01 or 02 | Address of<br>1st bit |    | Number of bits<br>to read |    | CRC |    |
|----------------|---------------------------|-----------------------|----|---------------------------|----|-----|----|
| 02             | 01                        | 02                    | 7F | 00                        | 0E | 8D  | 97 |

#### Reply:

| Device<br>Address | Function Code<br>01 or 02 | Number of<br>bytes read | First byte<br>of data | Last byte<br>of data | CRC |    |
|-------------------|---------------------------|-------------------------|-----------------------|----------------------|-----|----|
| 02                | 01                        | 02                      | 27                    | 03                   | A6  | 0D |

An expansion of the data bytes illustrates the relationship between data and the parameter addresses.

| Data byte      | 1st byte (27h) |     |     |     |     |     |     |     | 2nd byte (03h) |   |     |     |     |     |     |     |
|----------------|----------------|-----|-----|-----|-----|-----|-----|-----|----------------|---|-----|-----|-----|-----|-----|-----|
| Param. address | 647            | 646 | 645 | 644 | 643 | 642 | 641 | 640 |                |   | 653 | 652 | 651 | 650 | 649 | 648 |
| Bit values     | 0              | 0   | 1   | 0   | 0   | 1   | 1   | 1   | 0              | 0 | 0   | 0   | 0   | 0   | 1   | 1   |

**Read n Words**

Function Code: 03 or 04, (03h or 04h)

**Command:**

| Device Address | Function Code<br>03 or 04 | Address of<br>1st word |     | Number of<br>words to read |     | CRC |     |
|----------------|---------------------------|------------------------|-----|----------------------------|-----|-----|-----|
| 1 byte         | 1 byte                    | MSB                    | LSB | MSB                        | LSB | MSB | LSB |

The maximum number of words that may be read is 32.

**Reply:**

| Device<br>Address | Function Code<br>03 or 04 | Number of<br>bytes read | Value of 1st<br>word |     | .... | Value of<br>last word |     | CRC |     |
|-------------------|---------------------------|-------------------------|----------------------|-----|------|-----------------------|-----|-----|-----|
| 1 byte            | 1 byte                    | 1 byte                  | MSB                  | LSB | .... | MSB                   | LSB | MSB | LSB |

**Example**

For a 605 Inverter at device address 02, read 2 parameters beginning at Tag 254 (Speed Setpoint and Speed Demand). SPEED SETPOINT is 100.00% and SPEED DEMAND is 50.00%.

**Command:**

| Device Address | Function Code<br>03 or 04 | Address of<br>1st word |    | Number of<br>words to read |    | CRC |    |
|----------------|---------------------------|------------------------|----|----------------------------|----|-----|----|
| 02             | 03                        | 00                     | FD | 00                         | 02 | 55  | C8 |

**Reply:**

| Device<br>Address | Function Code<br>03 or 04 | Number of<br>bytes read | Value of 1st<br>word |    | Value of last<br>word |    | CRC |    |
|-------------------|---------------------------|-------------------------|----------------------|----|-----------------------|----|-----|----|
| 02                | 03                        | 04                      | 27                   | 10 | 13                    | 88 | CF  | 14 |

**Write 1 Bit**

Function Code: 05, (05h)

**Command:**

| Device Address | Function Code<br>05 | Address of bit |     | Value of bit |     | CRC |     |
|----------------|---------------------|----------------|-----|--------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB            | LSB | MSB          | LSB | MSB | LSB |

The LSB of “Value of bit” is always set to 00. The MSB is used to write the value of the addresses bit. To set a bit value of 1, either transmit 01h or FFh. To set a bit value of 0 transmit 00h.

A device address 00 will broadcast the data to all devices on the network.

**Reply:**

(There will be no reply to a command broadcast to the device address 00.)

| Device Address | Function Code<br>05 | Address of bit |     | Value of bit |     | CRC |     |
|----------------|---------------------|----------------|-----|--------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB            | LSB | MSB          | LSB | MSB | LSB |

The reply to function 05 is the same as the command.

**Example**

Write to the unit at device address 02 setting the parameter with Tag 3 to be TRUE..

**Command:**

| Device Address | Function Code<br>05 | Address of bit |    | Value of bit |    | CRC |    |
|----------------|---------------------|----------------|----|--------------|----|-----|----|
| 02             | 05                  | 00             | 02 | 01           | 00 | 6D  | A9 |

**Reply:**

| Device Address | Function Code<br>05 | Address of bit |    | Value of bit |    | CRC |    |
|----------------|---------------------|----------------|----|--------------|----|-----|----|
| 02             | 05                  | 00             | 02 | 01           | 00 | 6D  | A9 |

**Write 1 Word**

Function Code: 06, (06h)

**Command:**

| Device Address | Function Code<br>06 | Address of word |     | Value of word |     | CRC |     |
|----------------|---------------------|-----------------|-----|---------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB             | LSB | MSB           | LSB | MSB | LSB |

A device address 00 will broadcast the data to all devices on the network.

**Reply:**

(There will be no reply to a command broadcast to the device address 00.)

| Device Address | Function Code<br>06 | Address of word |     | Value of word |     | CRC |     |
|----------------|---------------------|-----------------|-----|---------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB             | LSB | MSB           | LSB | MSB | LSB |

The reply to function 06 is the same as the command.

**Example**

For a 605 Inverter at device address 02, write 20.0 to RAMP ACCEL RATE (Tag 258).

**Command:**

| Device Address | Function Code<br>06 | Address of word |    | Value of word |    | CRC |    |
|----------------|---------------------|-----------------|----|---------------|----|-----|----|
| 02             | 06                  | 01              | 01 | 00            | C8 | D8  | 53 |

**Reply:**

| Device Address | Function Code<br>06 | Address of word |    | Value of word |    | CRC |    |
|----------------|---------------------|-----------------|----|---------------|----|-----|----|
| 02             | 06                  | 01              | 01 | 00            | C8 | D8  | 53 |

**Diagnostic Loopback**

Function Code: 08, (08h)

This function provides a means of testing the communications link by means of a “loopback” operation. The data sent to the unit is returned unchanged. Only diagnostic code 0 from the Gould Modicon Specification is supported.

**Command:**

| Device Address | Function Code<br>08 | Diagnostic Code<br>0000 |     | Loopback Data |     | CRC |     |
|----------------|---------------------|-------------------------|-----|---------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB                     | LSB | MSB           | LSB | MSB | LSB |

**Reply:**

The reply to function 08 is the same as the command.

**Example**

Perform a loopback from the unit at address 02 using a data value of 1234h.

**Command:**

| Device Address | Function Code<br>08 | Diagnostic Code<br>0000 |    | Loopback Data |    | CRC |    |
|----------------|---------------------|-------------------------|----|---------------|----|-----|----|
| 02             | 08                  | 00                      | 00 | 12            | 34 | ED  | 4F |

**Reply:**

| Device Address | Function Code<br>08 | Diagnostic Code<br>0000 |    | Loopback Data |    | CRC |    |
|----------------|---------------------|-------------------------|----|---------------|----|-----|----|
| 02             | 08                  | 00                      | 00 | 12            | 34 | ED  | 4F |



**Write n Bits**

Function Code: 15, (0Fh)

**Command:**

| Device Address | Function Code<br>0F | Address of 1st word |     | Number of bits to write |     | Number of data bytes (n) | Data    | CRC |     |
|----------------|---------------------|---------------------|-----|-------------------------|-----|--------------------------|---------|-----|-----|
| 1 byte         | 1 byte              | MSB                 | LSB | MSB                     | LSB | 1 byte                   | n bytes | MSB | LSB |

The maximum number of bits that may can be transmitted is 512.

A device address 00 will broadcast the data to all devices on the network.

**Reply:**

(There will be no reply to a command broadcast to the device address 00).

| Device Address | Function Code<br>0F | Address of 1st word |     | Number of bits written |     | CRC |     |
|----------------|---------------------|---------------------|-----|------------------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB                 | LSB | MSB                    | LSB | MSB | LSB |

**Example**

Write to the Slave unit, at device address 02, 14 parameters beginning at Tag 640 the values 1, 1, 1, 0, 0, 1, 0, 0, 1, 1, 0, 0, 0, 0.

**Command:**

| Device Address | Function Code<br>0F | Address of 1st word |    | Number of bits to write |    | Number of data bytes (n) | Data      | CRC |    |
|----------------|---------------------|---------------------|----|-------------------------|----|--------------------------|-----------|-----|----|
| 02             | 0F                  | 02                  | 7F | 00                      | 0E | 02                       | see below | 83  | 06 |

| Data byte      | 1st byte (27h) |     |     |     |     |     |     |     |
|----------------|----------------|-----|-----|-----|-----|-----|-----|-----|
| Param. address | 647            | 646 | 645 | 644 | 643 | 642 | 641 | 640 |
| Bit values     | 0              | 0   | 1   | 0   | 0   | 1   | 1   | 1   |

| Data byte      | 2nd byte (03h) |   |     |     |     |     |     |     |
|----------------|----------------|---|-----|-----|-----|-----|-----|-----|
| Param. address |                |   | 653 | 652 | 651 | 650 | 649 | 648 |
| Bit values     | 0              | 0 | 0   | 0   | 0   | 0   | 1   | 1   |

**Reply:**

| Device Address | Function Code<br>0F | Address of 1st word |    | Number of bits written |    | CRC |    |
|----------------|---------------------|---------------------|----|------------------------|----|-----|----|
| 02             | 0F                  | 02                  | 7F | 00                     | 0E | E4  | 5C |

**Write n Words**

Function Code: 16, (10h)

**Command:**

| Device Address | Function Code<br>10 | Address of 1st word |     | Number of words to write |     | Number of data bytes (n) | Data    | CRC |     |
|----------------|---------------------|---------------------|-----|--------------------------|-----|--------------------------|---------|-----|-----|
| 1 byte         | 1 byte              | MSB                 | LSB | MSB                      | LSB | 1 byte                   | n bytes | MSB | LSB |

The maximum number of words that may be transmitted is 32.

The first 2 bytes are data with the required value of the first parameter, MSB first. Following pairs are data for the consecutive parameter addresses.

A device address 00 will broadcast the data to all devices on the network.

**Reply:**

(There will be no reply to a command broadcast to the device address 00).

| Device Address | Function Code<br>10 | Address of 1st word |     | Number of words written |     | CRC |     |
|----------------|---------------------|---------------------|-----|-------------------------|-----|-----|-----|
| 1 byte         | 1 byte              | MSB                 | LSB | MSB                     | LSB | MSB | LSB |

**Example**

605 Inverter: write to the Slave unit at device address 02

Tag 258 RAMP ECCEL RATE = 20.0

Tag 259 RAMP DECEL RATE = 15.0

**Command:**

| Device Address | Function Code<br>10 | Address of 1st word |    | Number of words to write |    | Number of data bytes (n) | Data      | CRC |    |
|----------------|---------------------|---------------------|----|--------------------------|----|--------------------------|-----------|-----|----|
| 02             | 10                  | 01                  | 01 | 00                       | 02 | 04                       | see below | 31  | 27 |

| Data (200) for Tag 258 |    | Data (150) for Tag 259 |    |
|------------------------|----|------------------------|----|
| 00                     | C8 | 00                     | 96 |

**Reply:**

| Device Address | Function Code<br>10 | Address of 1st word |    | Number of words written |    | CRC |    |
|----------------|---------------------|---------------------|----|-------------------------|----|-----|----|
| 02             | 10                  | 01                  | 01 | 00                      | 02 | 11  | C7 |

### Error Response

The MODBUS protocol defines the response to a number of error conditions. A Slave device is able to detect a corrupted command or one that contains an incorrect instruction, and will respond with an error code.

With some errors, the Slave devices on the network are unable to make a response. After a wait period, the Master will interpret the failure to reply as a communications error. The Master should then re-transmit the command.

A Slave device that has detected a corrupted command, or a command that contains an incorrect instruction, will respond with an error message. The error message has the following syntax:

| Device Address | Function Code | Error Response Code | CRC |     |
|----------------|---------------|---------------------|-----|-----|
| 1 byte         | 1 byte        | 1 byte              | MSB | LSB |

The Function Code byte contains the transmitted function code but with the most significant bit set to 1. (This is the result of adding 128 to the function code.)

The error response code indicates the type of error detected. The following error response codes are supported by Parker SSD Drives' units:

| Code | Error                | Description   |
|------|----------------------|---|
| 01   | Illegal Function     | The requested function is not supported by the slave.                                   |
| 02   | Illegal Data Address | The address referenced in the data field is not an allowable address for the Slave      |
| 03   | Illegal Data Value   | The value referenced in the data field is not allowable in the addressed Slave location |
| 06   | Host Busy            | The slave cannot process the request at this time. Try again later.                     |
| 07   | NAK                  | Rejected for an unspecified reason.   |

### Wait Period

There are several errors for which the Slave devices on the network are unable to make a response:

- If the Master attempts to use an invalid address then no Slave device will receive the message
- For a message corrupted by interference, the transmitted CRC will not be the same as the internally calculated CRC. The Slave will reject the command and will not reply to the Master.


After a wait period, the Master will re-transmit the command.

A wait period is also required after a broadcast communication to device address 0.

**IMPORTANT:** Failure to observe the wait period after a broadcast will negate the broadcast message.

## Typical Transmission Line Activity

This diagram illustrates a typical sequence of events on a Modbus transmission line.

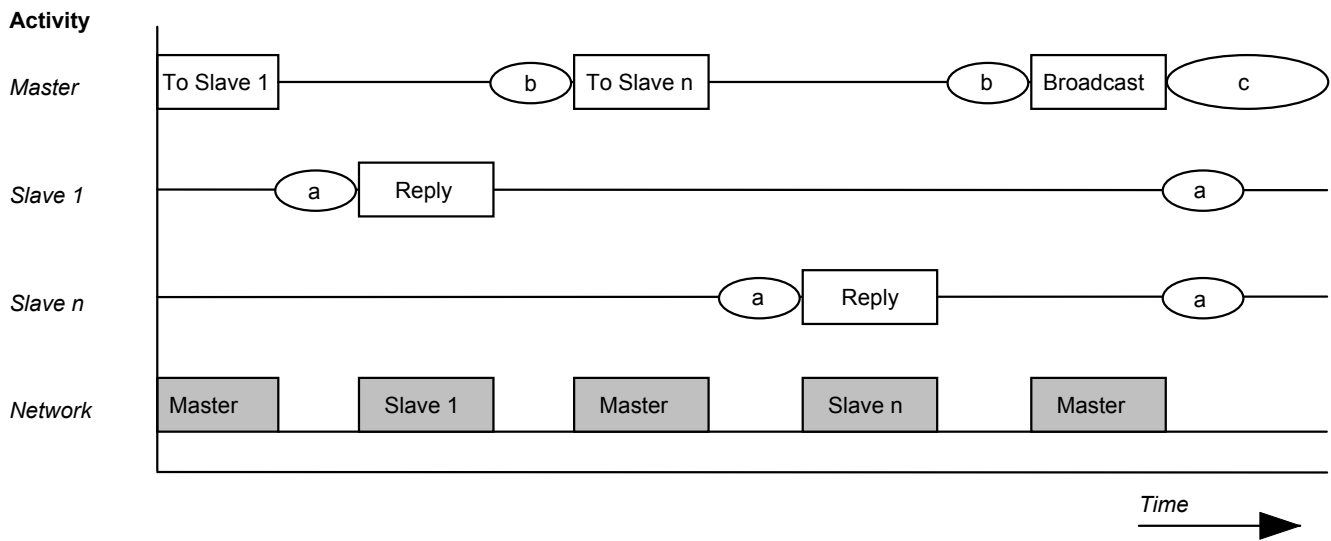

- Period "a"      The processing time (latency), required by the Slave to complete the command and construct a reply. This is typically 2 milliseconds.
- Period "b"      The processing time required by the Master to analyse the Slave response and formulate the next command.
- Period "c"      The wait time calculated by the Master for the Slaves to perform the operation. None of the Slaves will reply to a broadcast message.

## MODBUS RTU Parameter Mapping

### 1. MODBUS RTU Prime Set

| Mnemonic | Description                       | Range (HEX values)                   | Access    |
|----------|-----------------------------------|--------------------------------------|-----------|
| 9901     | Instrument Identity               | 0690, 0605 or 5900                   | Read Only |
| 9902     | Main Software Version             | 0000 to FFFF                         | Read Only |
| 9903     | 6051 Software Version             | 0000 to FFFF<br>(0000 if not fitted) | Read Only |
| 9904     | Technology Box 1 Software Version | 0000 to FFFF                         | Read Only |
| 9905     | Technology Box 2 Software Version | 0000 to FFFF                         | Read Only |
| 9909     | Last Tag Number                   | 0000 to FFFF                         | Read Only |

### 2. Command/Status

| Mnemonic | Description  | Range (HEX values) | Access     |
|----------|--------------|--------------------|------------|
| 9911     | Command      | see below (!1)     | Write Only |
| 9912     | State        | see below (!2)     | Read Only  |
| 9913     | Save Command | see below (!3)     | Write Only |
| 9914     | Save State   | see below (!4)     | Read Only  |

#### !1 : Command

Write-only: used to modify the state of the Inverter and to load configuration data from non-volatile memory.

| HEX Value | Description  |
|-----------|--|
| 7777      | Reset Command. Acknowledges failed restore. Loads and saves (590+ does not save) default Product Code and default Configuration (Macro 1). |
| 0101      | Restores Saved Configuration from drive's non-volatile memory.   |
| 0110      | Restores Default Configuration (Macro 0) - <i>not 590+</i>   |
| 0111      | Restores Default Configuration (Macro 1)   |
| 0112      | Restores Default Configuration (Macro 2) - <i>not 590+</i>   |
| 0113      | Restores Default Configuration (Macro 3) - <i>not 590+</i>   |
| 0114      | Restores Default Configuration (Macro 4) - <i>not 590+</i>   |
| 4444      | Exit Configuration Mode  |
| 5555      | Enter Configuration Mode   |

#### !2 : State

Read-only: used to determine the major state of the Inverter.

| HEX Value | Description                              |
|-----------|--|
| 0000      | Initialising. (Powering up)              |
| 0001      | Corrupted Product Code and Configuration |
| 0002      | Corrupted Configuration                  |
| 0003      | Restoring Configuration                  |
| 0004      | Re-Configuring Mode                      |
| 0005      | Normal Operation Mode                    |

| <b>!3 : Save Command</b>  |   |
|---|---|
| Write-only: used to save the configuration and product code in non-volatile memory. |   |
| HEX Value   | Description   |
| 0000  | Reset Command. Acknowledges (clears) any previous save error. |
| 0001  | Saves Configuration to drive's non-volatile memory.           |
| 0100  | Saves Product Code to drive's non-volatile memory.            |

| <b>!4 : Save State</b>  |             |
|---|-------------|
| Read only: used to determine the progress of a non-volatile saving operation. |             |
| HEX Value   | Description |
| 0000  | Idle        |
| 0001  | Saving      |
| 0002  | Failed      |

### 3. Tag Access

Each parameter is directly mapped to four MODBUS registers: two of these represent it as a single data bit, and the other two represent it as a 16-bit signal or unsigned data word.

This allows a parameter to be read and written using the MODBUS bit functions (01, 02, 05 and 15) or word functions (03, 04, 06 and 16).

For example, the parameter with Tag 65 in the drive is mapped to register:

#### Bit Functions

{0}0065 as a COIL STATUS REGISTER for access using functions : (01, 05, 15)

{1}0065 as an INPUT STATUS REGISTER for access using function (02)

:

#### Word Functions

{4}0065 as a HOLDING REGISTER for access using functions : (03, 06, 16)

{3}0065 as an INPUT REGISTER for access using function : (04)

### 4. PNO Access (590+ and 590+DRV only)

Parameters may also be accessed using the register number derived from the "EI Bisynch Binary Parameter Specification Tables" page 35.
















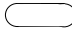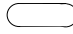







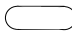












For example, PNO 39 can be accessed as register X1039 (i.e. PNO + 1000)  
where {X} is {0}, {1}, {4} or {3}.

### 5. Encoding

All parameters may be accessed except for those of type STRING.

Reading a parameter which is not of type BOOLEAN using a bit function (01 or 02) will return 1 if the value is non-zero. Writing to parameter which is not of type BOOLEAN using a bit function (05 or 15) will set the value to either 0 or 1 if the limits of the parameter allow this.


## Troubleshooting

| LED Indications  |   | Cause/Symptom   | Remedy  |
|--|---|---|---|
| NETWORK  | MODULE  |   |   |
| <br>(OFF) |    | No power at the drive.  | Check and apply power to the drive.   |
|           |    | Technology Box/Option not installed correctly.  | Check connections between Technology Box/Option and drive. On 605A & B, check the ribbon cable.   |
|           |    | Hardware fault.<br><b>605A &amp; B WARNING:</b> Remove the terminal cover and the Technology Box whilst connected to see the drive's HEALTH and RUN LEDs.<br><b>BEWARE OF ELECTRIC SHOCK.</b> | If HEALTH and RUN LEDs are OFF, replace the drive, else replace the Technology Box/Option.  |
|           |    | The self-test has failed.   | Replace the Technology Box/Option.  |
|           |    | Incorrect Technology Box/Option fitted or selected.   | Fit the correct Technology Box/Option or select the matching value for the TYPE parameter in the TEC OPTION function block. (TYPE = RS485). |
|           |    | Set-up fault. A TEC OPTION parameter is out-of-range.   | Select the correct value for the parameter in the TEC OPTION function block.  |
|         |  | Wiring to RXA and RXB terminals is transposed.  | Correct the wiring to the RXA and RXB terminals.  |
|         |  | No data is being received from PLC/SCADA.   | Enable the PLC/SCADA application program.   |
|         |  | No data is being received from PLC/SCADA.   | Check power for all equipment on the network, e.g. RS232 to RS485 converter or repeater.  |
|         |  | Baud rate incorrect.  | Set the same baud rate on the drive and PLC/SCADA.  |
|         |  | Incorrect data format.  | Check the PLC/SCADA has 7 data bits selected.   |
|         |  | Incorrect parity.   | Check the PLC/SCADA has even parity selected.   |
|         |  | Drive not being addressed.  | Check the GID and UID drive address matches the address sent by the PLC/SCADA.  |
|         |  | ERROR CODE = 00C0<br>PLC/SCADA receives invalid/corrupted reply.  | Check the GID and UID drive address is unique to the network.   |
| *       |  | ERROR CODE = 00C0<br>Wiring from TXA/TXB incorrect (4-wire only)  | Correct the TXA/TXB wiring.   |
| *       |  | ERROR CODE - 00C0<br>(2-wire only)  | Ensure that SW1 is set for 2-wire operation.  |
| *       |  | ERROR CODE = 01C7<br>Mnemonic from PLC/SCADA not recognised.  | Send the correct mnemonic from the PLC/SCADA.   |
| *       |  | ERROR CODE = 02C2<br>Drive received an incorrect checksum.  | Check (BCC) if manually entered, or try sending the message again.  |

| LED Indications |        | Cause/Symptom   | Remedy  |
|-----------------|--------|---|---|
| NETWORK         | MODULE |   |   |
| *               |        | <i>If this is an intermittent problem, it may indicate poor wiring and/or poor cable routing in an electrically `noisy` environment. Also check that terminating resistors are present and correctly set.</i> |   |
| ●               | ●      | ERROR CODE = 04C8<br>PLC/SCADA tried to read from a write-only parameter.   | Correct the PLC/SCADA program so that it doesn't try to read from a write-only parameter. |
| ●               | ●      | ERROR CODE = 05C8<br>PLC/SCADA tried to write to a read-only parameter.   | Correct the PLC/SCADA program so that it doesn't try to write to a read-only parameter.   |
| ●               | ●      | ERROR CODE = 07C8<br>PLC/SCADA sent a message with invalid data format.   | Correct the PLC/SCADA to send the correct data format for the parameter in question.      |
| ●               | ●      | ERROR CODE = 08C8<br>PLC/SCADA sent a value outside the permissible range of the parameter.   | Correct the PLC/SCADA program so that it doesn't send out-of-range parameter values.      |



| ASCII Table    |                |                |                |                |     |                 |    |   |   |   |   |     |
|----------------|----------------|----------------|----------------|----------------|-----|-----------------|----|---|---|---|---|-----|
| BINARY         |                |                |                | b <sub>6</sub> | 0   | 0               | 0  | 0 | 1 | 1 | 1 | 1   |
|                |                |                |                | b <sub>5</sub> | 0   | 0               | 1  | 1 | 0 | 0 | 1 | 1   |
|                |                |                |                | b <sub>4</sub> | 0   | 1               | 0  | 1 | 0 | 1 | 0 | 1   |
| b <sub>3</sub> | b <sub>2</sub> | b <sub>1</sub> | b <sub>0</sub> | HEX            | 0x  | 1               | 2  | 3 | 4 | 5 | 6 | 7   |
| 0              | 0              | 0              | 0              | <b>x0</b>      | NUL | DLE             | SP | 0 | @ | P | ` | p   |
| 0              | 0              | 0              | 1              | <b>1</b>       | SOH | DC <sub>1</sub> | !  | 1 | A | Q | a | q   |
| 0              | 0              | 1              | 0              | <b>2</b>       | STX | DC <sub>2</sub> | "  | 2 | B | R | b | r   |
| 0              | 0              | 1              | 1              | <b>3</b>       | ETX | DC <sub>3</sub> | #  | 3 | C | S | c | s   |
| 0              | 1              | 0              | 0              | <b>4</b>       | EOT | DC <sub>4</sub> | \$ | 4 | D | T | d | t   |
| 0              | 1              | 0              | 1              | <b>5</b>       | ENQ | NAK             | %  | 5 | E | U | e | u   |
| 0              | 1              | 1              | 0              | <b>6</b>       | ACK | SYN             | &  | 6 | F | V | f | v   |
| 0              | 1              | 1              | 1              | <b>7</b>       | BEL | ETB             | '  | 7 | G | W | g | w   |
| 1              | 0              | 0              | 0              | <b>8</b>       | BS  | CAN             | (  | 8 | H | X | h | x   |
| 1              | 0              | 0              | 1              | <b>9</b>       | HT  | EM              | )  | 9 | I | Y | i | y   |
| 1              | 0              | 1              | 0              | <b>A</b>       | LF  | SUB             | *  | : | J | Z | j | z   |
| 1              | 0              | 1              | 1              | <b>B</b>       | VT  | ESC             | +  | ; | K | [ | k | {   |
| 1              | 1              | 0              | 0              | <b>C</b>       | FF  | FS              | ,  | < | L | \ | l |     |
| 1              | 1              | 0              | 1              | <b>D</b>       | CR  | GS              | -  | = | M | ] | m | }   |
| 1              | 1              | 1              | 0              | <b>E</b>       | SO  | RS              | .  | > | N | ^ | n | ~   |
| 1              | 1              | 1              | 1              | <b>F</b>       | SI  | US              | /  | ? | O | _ | o | DEL |

| ISS.  | MODIFICATION   | ECN No.                        | DATE     | DRAWN | CHK'D  |
|---|--|--------------------------------|----------|-------|--------|
| 1   | First Issue of HA463560U001 for EI Bisynch ASCII/Binary and Modbus. Information added for 605C, 590+ and 590+DRV. Never printed.   | 12438                          | 01/01/00 | CM    | KJ     |
| 2   | Re-issued with minor corrections: page headers corrected, figure titles for wiring diagrams improved, Modbus CRC calculation examples corrected, ASCII and Binary examples corrected. Initial print run. | 13968<br>(13547)<br>(13424)    | 18/02/00 | CM    | KJ     |
| 3   | Corrections to Figures, 4, 5, 6, 7, 8 and 9. ON – OFF switches reversed.   | 15045                          | 22.03.00 | FEP   | TL     |
| 4   | Page 4 under DIL Switch (SW1) Settings table correction.<br>Page 9 corrected figure 9.<br>New back cover.  | 15176                          | 11.05.00 | FEP   | KJ     |
| 5   | Updated to include the 690+ product.<br>Other small changes  | 16962                          | 05/08/02 | CM    | KJ     |
| 1   | First release of HA463560U002. Software Version 3.x  | 16692                          | 17/06/03 | CM    | KJ     |
| 2   | Company name change.   | 18354                          | 22/11/05 | CM    | KJ     |
| 3   | Correction of error throughout manual (incorrectly mentioned LonWorks)   | 19363                          | 19/04/06 | CM    | KJ     |
| 4   | Company name change.   | 19591                          | 02/08/07 | CM    | KJ     |
| FIRST USED ON   |  | MODIFICATION RECORD            |          |       |        |
|   |  | RS485 Communications Interface |          |       |        |
|  |  | DRAWING NUMBER                 |          |       | SHT. 1 |
|   |  | ZZ463560C001                   |          |       | OF 1   |